


Whirlpool



Health & Safety, Use & Care, Installation Guide and Online Warranty Registration Information

Model : **MWP321IB/MWP421IB**

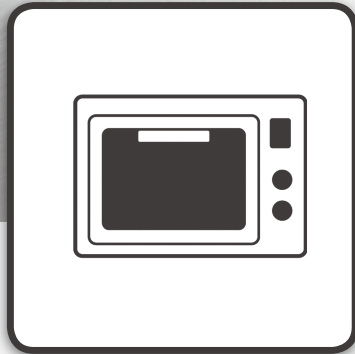

www.whirlpool.com.au
www.whirlpool.co.nz

INDEX

INSTALLATION

Installation	3
--------------------	---

SAFETY

Important safety instructions	4
Trouble shooting guide	5
Precautions	6

ACCESSORIES AND MAINTENANCE

Accessories	7
Maintenance & Cleaning	8

PRODUCT INSTRUCTION

Product Instruction	9
---------------------------	---

CONTROL PANEL

Control Panel & Display Description.....	10
--	----

GENERAL USE

Stand-by mode/ Eco Stand-by mode	11
Start Protection / Child Lock	11
Pause or Stop cooking	11
Add / Stir / Turn food	11
Shortcut Guide	12
Clock / Mute on/off	12

COOKING FUNCTIONS

Jet Start	13
Microwave	14
Defrost.....	15
Dough Rising	16
Auto Cook.....	17
Soft/Melt	20
Keep Warm	21
Auto Clean	22
Popcorn.....	23
Yogurt	24


ENVIRONMENTAL HINTS

Environmental Hints	25
Technical Specifications	25

INSTALLATION

PRIOR TO CONNECTING

Position the microwave oven at a distance from other heating sources. For sufficient ventilation, there must be a space of at least 10 cm backward, 15 cm above and 10 cm left side of the microwave oven. The microwave oven should not be placed in a cabinet, it shall be placed against a wall. The microwave oven shall be used on a counter top or on a shelf.

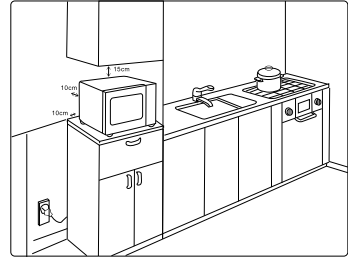

- * Check if the voltage on the rating plate corresponds to the voltage in your home.
- * Place the microwave oven on a stable and even surface that is strong enough to hold the microwave oven and the food utensils you put in it. Use carefully when handling.
- * Ensure the space underneath, above and around the microwave oven is empty to allow for proper airflow.
- * Ensure the appliance is not damaged. Check the microwave oven door is closed firmly against the door support and the internal door seal is not damaged. Empty the microwave oven and clean interior with a soft, damp cloth.
- * Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.
- * Do not use an extension cord: If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

⚠ WARNING:

- * **Improper use of the grounding plug can result in a risk of electric shock.**
- * **Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you have doubts as to whether the microwave oven is properly grounded.**

ⓘ NOTE:

Prior to using the microwave for the first time, it is recommended to remove the protective film from the control panel and the cable tie from the power cord.

AFTER CONNECTING

- * The microwave oven can be operated only if the microwave oven door is firmly closed.
- * Poor television reception and radio interference may result if the microwave oven is located close to a TV, radio or aerial.
- * The grounding of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.
- * The manufacturers are not liable for any problems caused by the user's failure to follow these instructions.

SAFETY

IMPORTANT SAFETY INSTRUCTIONS

Read Carefully And Keep For Future Reference

- * If material inside / outside the microwave oven ignite or smoke is emitted, keep microwave oven door closed and turn the microwave oven off. Disconnect the power or shut off power at the fuse or circuit breaker panel.
- * Do not leave the microwave oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

WARNING:

- * If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING:

- * It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which provides protection against exposure to microwave energy.

WARNING:

- * Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING:

- * When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

WARNING:

- * The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements inside the microwave oven.
- * Children less than 8 years of age shall be kept away unless continuously supervised.
- * The microwave oven is intended for heating foods and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- * This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- * Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children less than 8 years.
- * Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

NOTE:

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

- * Do not leave the microwave oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!
- * Do not heat, or use flammable materials in or near the microwave oven. Fumes can create a fire hazard or explosion.
- * Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers or other combustible materials as it may cause fire.
- * Do not use corrosive chemicals or vapors in this appliance. This type of microwave oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
- * Do not hang or place heavy items on the door as this can damage the microwave oven opening and hinges.

TROUBLE SHOOTING GUIDE

NOTE:

If the microwave oven does not work, do not make a service call until you have made following checks:

- * The Plug is properly inserted in the wall socket.
- * The Door is properly closed.
- * Check your Fuses and ensure that there is power available.
- * Check the microwave oven has ample ventilation.
- * Wait for 10 minutes, then try to operate the microwave oven once more.
- * Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and model number of the microwave oven (see Service label).

Consult your warranty booklet for further advice.

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord must only be replaced by a trained service technician.

WARNING:

- * **Service only to be carried out by a trained service technician.**
- * **Do not remove any cover.**

PRECAUTIONS

GENERAL

This appliance is intended to be used in household and similar applications such as:

- * Staff kitchen areas in shops, offices and other working environments;
- * Farm houses;
- * By clients in hotels, motels and other residential environments;
- * Bed and breakfast type environments.

No other use is permitted (e.g. heating rooms).

NOTE:

- * The appliance should not be operated without food inside of it. Operation in this manner is likely to damage the appliance.
- * The ventilation openings on the microwave oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the microwave oven and poor cooking results.
- * Whenever you are operating the microwave oven, always put a glass of water inside. The water will absorb the microwave energy and the microwave oven will not be damaged. Never operate with the empty unit.
- * Do not store or use this appliance outdoors.
- * Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar area.
- * Do not use the cavity for any storage purposes.
- * Remove wire twist-ties from paper or plastic bags before placing bag in the microwave oven.
- * Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.
- * Use hot pads or microwave oven mitts to prevent burns, when touching containers, microwave oven parts, and pans after cooking.

LIQUIDS

E.g. beverages or water. Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.

To prevent this possibility the following steps should be taken:

- * Avoid using straight-sided containers with narrow necks.
- * Stir the liquid before placing the container in the microwave oven.
- * After heating, allow standing for a short time, stirring again before carefully removing the container from the microwave oven.

 
CAREFUL

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure the heat is evenly distributed and the risk of scalding or burns can be avoided.

ACCESSORIES AND MAINTENANCE

ACCESSORIES

- * There are a number of accessories available in the market. Before you buy, ensure they are suitable for microwave use.
- * Ensure the utensils you use are microwave oven proof and allow microwaves to pass through them before cooking.
- * When you put food and accessories in the microwave oven, ensure they do not come in contact with the interior of the microwave oven. This is especially important with accessories made of metal or metal parts.
- * If accessories containing metal come into contact with the microwave oven interior, while the microwave oven is in operation, sparking can occur and the microwave oven could be damaged.
- * Metallic containers for food and beverage are not allowed during microwave cooking.
- * For better cooking performance, it is suggested that you need to put the food in the middle of turntable.

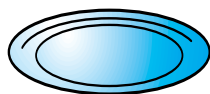

GLASS TURNTABLE

Use the Glass Turntable with all cooking methods. It collects dripping juices and food particles that otherwise would stain and soil the interior of the oven.

- Place the Glass Turntable on the Turntable Support.
-



TURNTABLE SUPPORT


Use the Turntable Support under the Glass Turntable. Never put any other utensils on the Turntable Support.

- Fit the Turntable Support in the oven.

MAINTENANCE & CLEANING

- * Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- * Do not use metal scouring pads, abrasive cleansers, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior microwave oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.
- * Use a soft and damp cloth with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.
- * Do not use steam cleaning appliances when cleaning your microwave oven.
- * The microwave oven should be cleaned regularly and any food deposits should be removed.
- * Cleaning is the only maintenance normally required. It must be carried out after the microwave oven being disconnected.
- * Do not spray directly on the microwave oven.
- * Do not allow grease or food particles to build up around the door.
- * This product offers an AUTO CLEAN function, which allows for easy cleaning of the microwave cavity. For more details, please refer to the AUTO CLEAN section .

PRODUCT INSTRUCTION

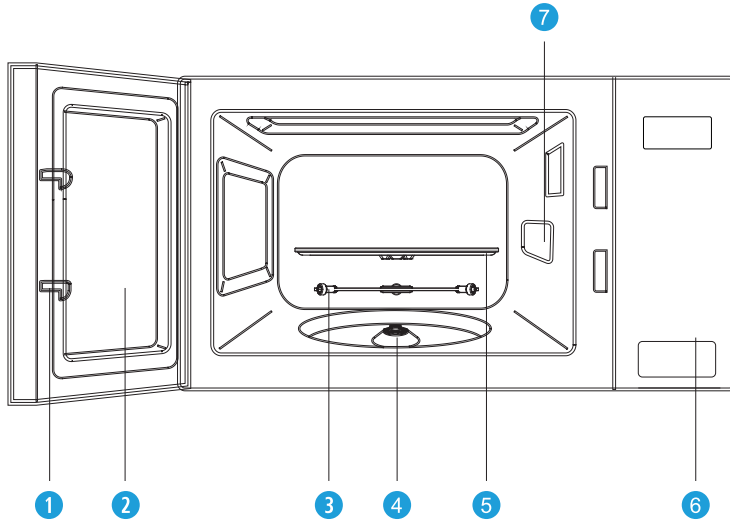

- ① Door lock
Microwave oven door must be properly closed in order for it to operate
- ② Viewing window
Allow user to see the cooking status
- ③ Turntable support
The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating
- ④ Rotating axis
The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate
- ⑤ Glass turntable
The food sits on the turntable, its rotation during operation helps to cook food evenly

⚠ NOTE


- Place the turntable support first
- Fit the turntable onto the rotating axis and make sure it is geared in properly

- ⑥ Control Panel
See below in details (the control panel is subject to change without prior notice)
- ⑦ Waveguide cover
It is inside the microwave oven, next to the wall of control panel.


⚠ NOTE

Never remove the waveguide cover

CONTROL PANEL& DISPLAY DESCRIPTION

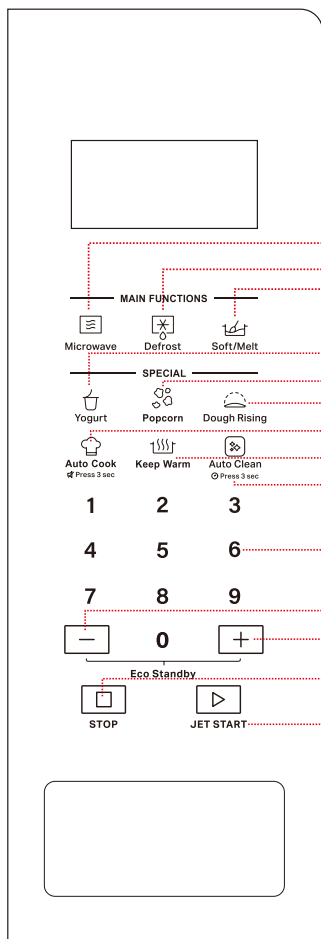

- ① Microwave - Use to set power level.
- ② Defrost - To set defrost programs.
- ③ Soft/Melt - To set Soft/Melt programs.
- ④ Yogurt - To set yogurt programs.
- ⑤ Popcorn - To set popcorn function.
- ⑥ Dough Rising - Use to set Dough Rising function.
- ⑦ Auto Cook - Use to access the automatic recipes menu. Press 3 sec - Mute On/Off
- ⑧ Keep Warm
- ⑨ Auto Clean - Use to clean oven. Press 3 sec - Use to set clock.
- ⑩ 0-9 keypad input
- ⑪ ⑫ +/- - Use to input food menu code, clock time, cook time, cook weight.
- ⑬ STOP - Use to stop or cancel cooking.
- ⑭ JET START - Use to start cooking or 30 sec Quick Start at Standby mode, or use to confirm selection.

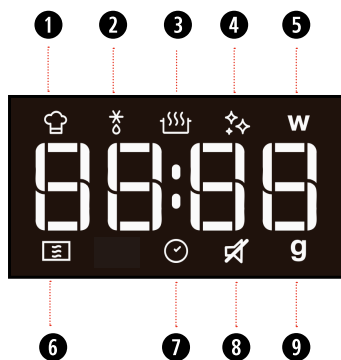

- ① Auto Cook Icon
- ② Defrost Icon
- ③ Keep Warm Icon
- ④ Auto clean Icon
- ⑤ Microwave power (watt) Icon
- ⑥ Microwave Icon
- ⑦ Clock/Insert time Icon
- ⑧ Mute On/Off Icon
- ⑨ Weight (grams) Icon



STAND-BY MODE / ECO STAND-BY MODE

The oven is in Stand-by mode when the clock is displayed (or, if the clock has not been set, the display will show “:”).

ECO STANDBY: The function is set in order to save power. During Standby mode, you can press “+” and “-” buttons simultaneously to enter ECO STANDBY mode. In standby mode, the display will show time or “:” for 10 seconds then go to ECO STANDBY mode. Press “+” and “-” buttons together again to quit the mode.



START PROTECTION / CHILD LOCK

This automatic safety function is activated one minute after the oven has returned to “Stand-by mode”.

When the safety function is active the door must be opened and closed in order to start the cooking, otherwise display will show “door”.

door



PAUSE OR STOP COOKING

To pause cooking:

The cooking can be paused to check, add or turn or stir the food by opening the door.

The setting will be maintained for 4 minutes.

The function will be stopped if STOP button is pressed during cooking.

To continue cooking:

Close the door and press Jet Start button. The cooking is resumed from where it was paused.

If you don't want to continue cooking you can:

Press Stop button and remove the food.

When the cooking is finished:

The display will show text “End”. An acoustic beep will signal once every one minute for 10 minutes.

Please note reducing or stopping this programmed cooling cycle will not have a negative impact on the function of the product.



ADD / STIR / TURN FOOD

Depending on the selected function, it could be needed to add / stir / turn food during cooking. In these cases, the oven will pause cooking and it will ask you to perform the needed action.

When required, you should:

* Open the door.

* Add or Stir or Turn the food (depending on the required action).

* Close the door and restart by pressing Jet Start button.

Notes: if the door is not opened after 4 minutes from the request to Add or Stir or Turn the food, the microwave oven will go to standby mode.

▶ Shortcut Guide

Cook Time Setting Shortcut

*For full power (1100W) cooking only

Method 1:

Directly input cooking time with 0-9 keypad, then press "Start"

Method 2:

Press "+" and hold until your desire cook time is reached, then press "▶" to start cooking

Method 3:

Press "▶" to start cooking for 30 sec first, then use "▶" key to add cook time at 30 sec interval, microwave oven will follow the new cook time to operate

Add/ Reduce Cook Time during cooking

Using Method 2 and Method 3 stated above can increase cook time when microwave is in operation. Cook time can also be reduced by pressing "-" during cooking.




Mute On/Off

Press AUTO COOK for 3 sec to activate this function, and press 3 sec again to deactivate



CLOCK

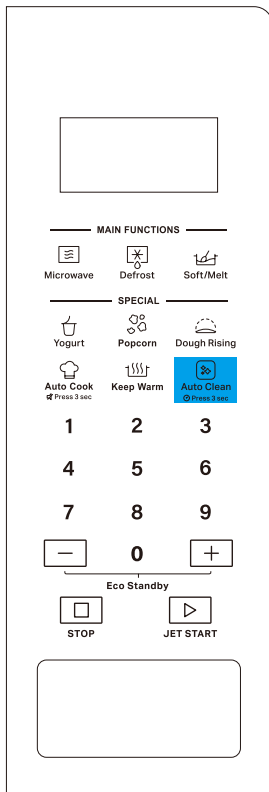


To SET THE CLOCK of your appliance:

- 1 In standby, press Auto Clean button for 3 seconds, then go to the Clock setting.
- 2 Press + / - or 0-9 keypad to set the hour.
- 3 Press JET START button to confirm the hour.
- 4 Press + / - or 0-9 keypad to set the minute.
- 5 Press JET START again to save Clock setting and return to standby mode.

Tips and suggestions:

- When plug in, the screen shows "24Hr" ("24" flashing), use +/- to change 24 or 12 hour format, press JET START to confirm; then the screen shows "12:00".
- In the process of cooking set, press STOP button to cancel this program.
- In the process of cooking set, if no operation in 1 minute, system automatically return to standby mode.
- If the clock set is not correctly performed, the display show "":

▶ JET START

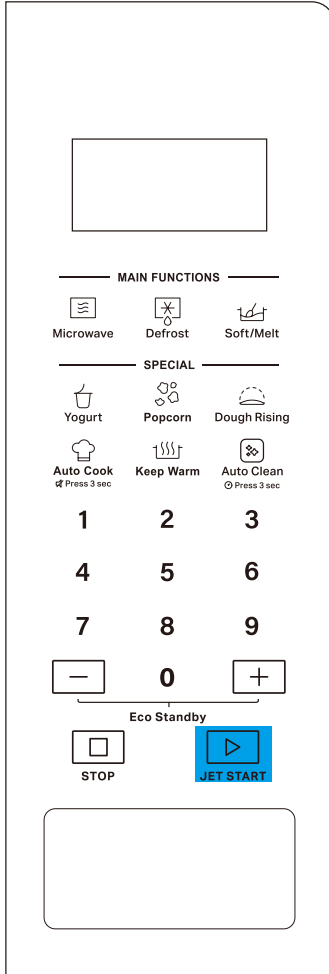

THIS FEATURE ALLOWS YOU to start the oven quickly. Press JET START button once, the oven starts to work at full power level. During cooking, press JET START to add time at 30 seconds interval. The longest cooking time is 90 minutes.

- 1 Press the JET START Button.

! NOTE:


Pressing JET START button, the Microwave function will start at full microwave power (1100W) for 30 seconds.

i Tips and suggestions:


- During the cooking it is not possible to change the cooking function but cooking time can be changed.
- To change the cooking time, please press +/- button. Or press the JET START button once to increase the duration time by 30 seconds.




MICROWAVE

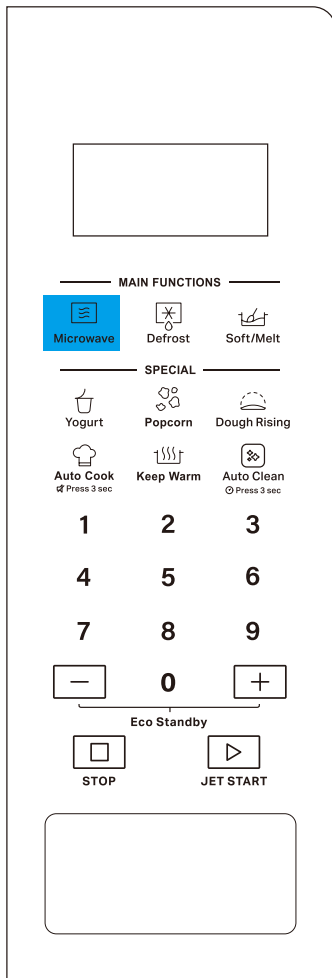

 To cook with microwave power individually, press the Microwave button repeatedly to select a cooking power level, then press +/- button to set a desired cooking time. The longest cooking time is 90 minutes.

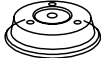Suggested Accessory:  Plate Cover (sold separately)

- 1 Press the Microwave button. The default power level (750W) and microwave icon  will be shown on the display and watt icon **W** starts blinking.
- 2 Press the Microwave button repeatedly or press +/- button to select suitable cooking power, then press JET START button.
- 3 Press + / - or 0-9 keypad to set the cooking time, then press JET START button to start cooking.


NOTE:

To select power, press the Microwave button again, the desired power level can be selected as below table.

POWER	SUGGESTED USE
90 W	Softening ice cream, butter and cheeses. Keep warm.
160 W	Defrosting.
350 W	Simmering stews, melting butter.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
650 W	Cooking for food no need to turn or stir.
750 W	Reheating soup with the food contains egg or cream. Cooking for ysh, meat.
900 W	Cooking vegetables
1000 W	Reheating clear soups or other food with a high water content.
1100 W	Popcorn or reheating of beverages , water, coffee, tea.





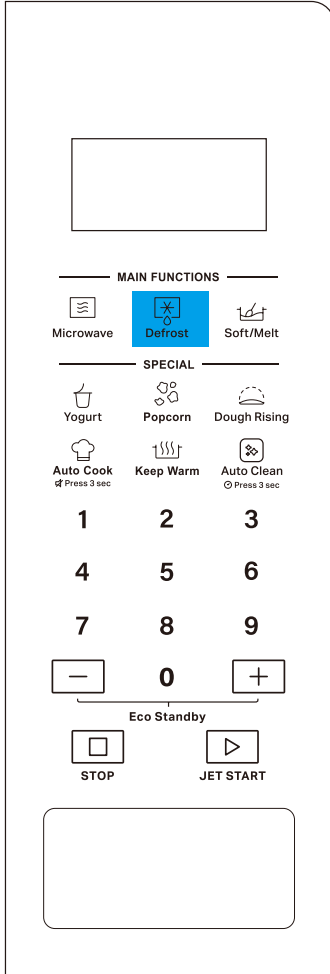


DEFROST



USE THIS FUNCTION for defrosting Meat, Poultry, Fish, and Vegetables.

- 1 Press Defrost button.
- 2 Press Defrost button repeatedly or +/- button to select food category in below table and press JET START to confirm.
- 3 For d01, press +/- or 1-5 button to set cooking time and press JET START button to start. For d02-d05, press +/- or 0-9 keypad button to set the weight, and press JET START button to start.

FOOD TYPE	WEIGHT	SUGGESTED USE
d01  Manual	/	
d02  Meat	100g - 2000g	Minced meat, cutlets, steaks or roasts. After cooking, allow food to rest for at least 5 minutes for better results.
d03  Vegetables	100g - 1000g	Larger, medium and small cut vegetables. Before serving, allow food to rest for 3-5 minutes for better results.
d04  Fish	100g - 1500g	Whole steaks or fish fillet. Allow food to rest for 5-10 minutes for better results.
d05  Poultry	100g - 1500g	Whole chicken, pieces or fillets. After cooking, allow food to rest for 5-10 minutes for better results.




Tips and suggestions:

- If the food is warmer than deep-freeze temperature (-18°C), choose a lower weight than the food.
- If the food is colder than deep-freeze temperature (-18°C), choose a higher weight than the food.
- Separate pieces as they begin to defrost. Individual slices defrost more easily.
- Standing time after defrosting always improves the result since the temperature will then be evenly distributed throughout the food.



DOUGH RISING

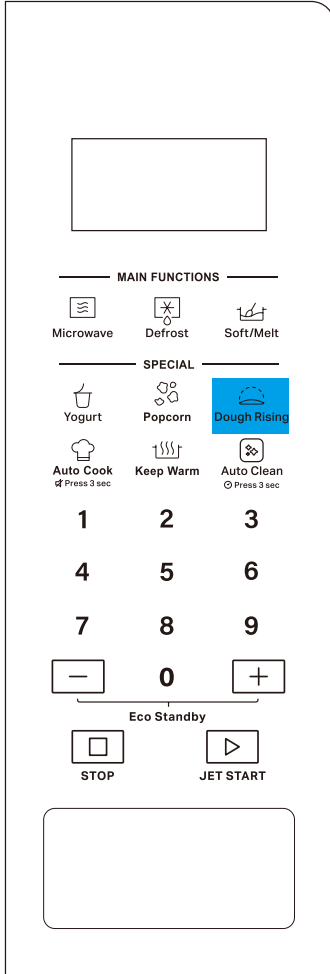

THIS FUNCTION ALLOWS YOU to have bread dough rising.

- 1 Put 200ml water into a container.
- 2 Place the container directly in the middle of the cavity.
- 3 Press the Dough Rising button.
- 4 Press the JET START button. The function will start.

After 5min of water heating, the display show "Add"(if there is no operation for 5 minutes, it will automatically return to standby).


- 5 Open the door, remove the water container, put the dough onto the turntable.
- 6 Close the door, press JET START button to start .

! NOTE:

Don't open the door during count down. Cavity lamp and fan will be off, only the countdown of cooking time is shown. The volume of the container should be at least 3 times of the dough.



Auto Cook

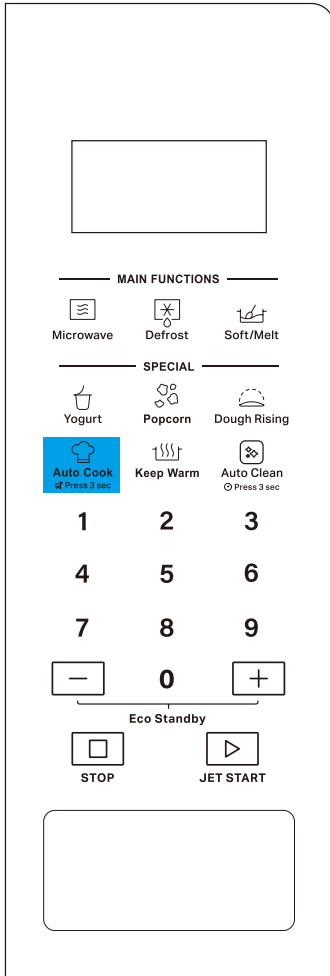








A SELECTION OF AUTOMATIC RECIPES with preset values to offer optimal cooking results.

- 1 Press Auto Cook button.
- 2 Press the Auto Cook button repeatedly or press +/- or 1-7 keypad button to select the desired recipe (see the table following).
- 3 Press JET START button to confirm the recipe and press +/- button to select the weight within the weight range in the table.
- 4 Press the JET START button. The function will start.








! NOTE:

According to the selected recipe, after a certain time, the display would ask you to add or turn or stir the food. See "Add/Stir/Turn food" move to next row.


Auto cook menu for model MWP321IB

RECIPE	INITIAL STATE	WEIGHT	TIME	PREPARATION
P01  Fish fillet	Room temperature	200-500g /100g	2min 30sec -5min	Place fish fillet into the plate and put in the microwave. Select the needed fish fillet quantity. Let stand 2-3 minutes after cooking.
P02  Cupcakes	Room temperature	8 cups (40g per cup)	2min 30sec 4min 30sec	Put 125g eggs and 170g sugar into container then stir for 2-3 mins, add 170g flour, 10g baking powder, 100g water, 50g butter, mix well, put food into the cups. Put the cups around the turntable to make sure uniform heat.
P03  Vegetable	Room temperature	200g, 400g, 600g	2min 5min 15sec	Cut the vegetable into pieces, add 2 tablespoon water.
P04  Potato	Room temperature	250g, 500g, 750g	7-12min	Wash the potato, prick with fork, put it into the microwave-safe dish and place in the microwave. Select the needed potato quantity. Let stand 2-3 minutes after cooking.
P05  Pasta	Room temperature	50g, 100g, 150g	14-20min	Place pasta into the plate and put in the microwave. Select the needed pasta quantity. Let stand 2-3 minutes after cooking.
P06  Pizza Reheat	Refrigerator temperature	200, 400g	1min 15sec 2min 30sec	Place pizza into the plate and put in the microwave. Select the needed pizza quantity. Let stand 2-3 minutes after cooking.
P07  Beverage	Room temperature	1,2,3 cups	1min 30sec 4min 30sec	From room temperature. Pour 1-3 cups of beverage into the container and place in the microwave.

Auto cook menu for model MWP421IB

RECIPE	INITIAL STATE	WEIGHT	TIME	PREPARATION
P01  Fish fillet	Room temperature	200-500g /100g	2min 30sec -5min	Place fish fillet into the plate and put in the microwave. Select the needed fish fillet quantity. Let stand 2-3 minutes after cooking.
P02  Cupcakes	Room temperature	8 cups (40g per cup)	3-5min	Put 125g eggs and 170g sugar into container then stir for 2-3 mins, add 170g flour, 10g baking powder, 100g water, 50g butter, mix well, put food into the cups. Put the cups around the turntable to make sure uniform heat.
P03  Vegetable	Room temperature	200g, 400g, 600g	2min -5min 15sec	Cut the vegetable into pieces, add 2 tablespoon water.
P04  Potato	Room temperature	250g, 500g, 750g	5-12min	Wash the potato, prick with fork, put it into the microwave-safe dish and place in the microwave. Select the needed potato quantity. Let stand 2-3 minutes after cooking.
P05  Pasta	Room temperature	50g, 100g, 150g	14-20min	Place pasta and 4 times of water into the plate and put in the microwave. Select the needed pasta quantity. Let stand 2-3 minutes after cooking.
P06  Pizza Reheat	Refrigerator temperature	200, 400g	1min 15sec -2min 30sec	Place pizza into the plate and put in the microwave. Select the needed pizza quantity. Let stand 2-3 minutes after cooking.
P07  Beverage	Room temperature	1,2,3 cups	1min 30sec -4min 30sec	From room temperature. Pour 1-3 cups of beverage into the container and place in the microwave.

SOFT/MELT

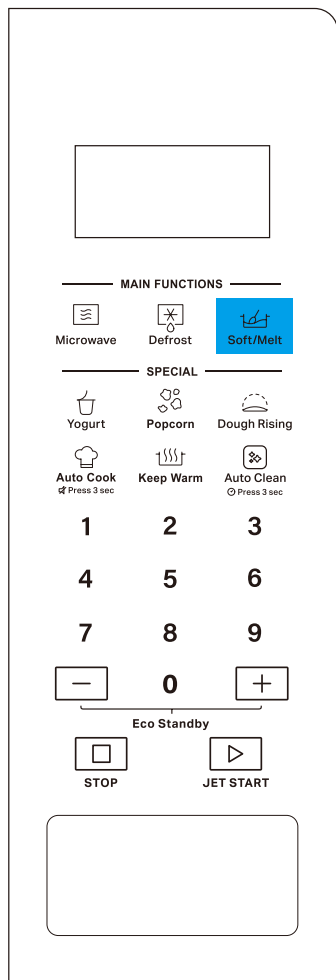










A SELECTION OF AUTOMATIC RECIPES with preset values to offer optimal cooking results.

- 1 Press Soft/Melt button.
- 2 Press the Soft/Melt button repeatedly or press +/- or 1-8 keypad button to select the desired recipe (see the table below).
- 3 Press JET START button to confirm the recipe and press +/- button to select the weight within the weight range in the table.
- 4 Press the JET START button. The function will start.

NOTE:

The cooking recipe will be confirmed once you leave the function button for 3 Seconds, press the function key again to change the recipe type.

	FOOD TYPE	WEIGHT	HINT
SL01 Soften	 Butter	50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
SL02 Soften	 Ice Cream	100g - 500g/50g	From frozen state, place ice cream container on turntable.
SL03 Soften	 Cream Cheese	50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
SL04 Soften	 Frozen Juice	250g - 500g /250g	From frozen state, remove lid from container.
SL05 Melting	 Butter	50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
SL06 Melting	 Chocolate	100g - 500g/50g	From room temperature, place in microwave safe dish.
SL07 Melting	 Cheese	50g - 500g/50g	From refrigerator state, place in microwave safe dish.
SL08 Melting	 Marshmallows	100g - 500g/50g	From room temperature, place in microwave safe dish. The dish should be at least double volume with the marshmallows since they are expanded during cooking.

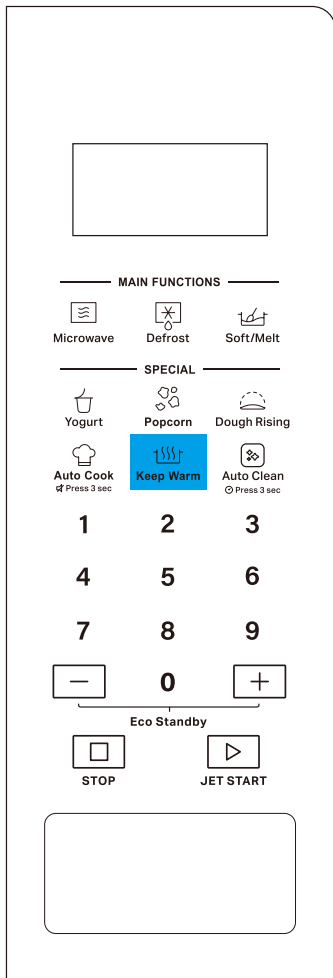

THIS FUNCTION ALLOWS YOU to keep your dishes warm.

Suggested Accessory:



Plate Cover(sold separately)


- 1 Press Keep Warm button.
- 2 Press the Keep Warm button repeatedly or +/- button to select suitable time (15, 30, 45 or 60 min), then press JET START button to start cooking.

NOTE:

The keep warm cycle last for a duration of 15 minutes(default is 30 minutes), the maximum time is 60 min. Each 15 min cycle, microwave will be turned on 1:30 min, then cavity lamp and fan are off, only the countdown time is shown.



AUTO CLEAN

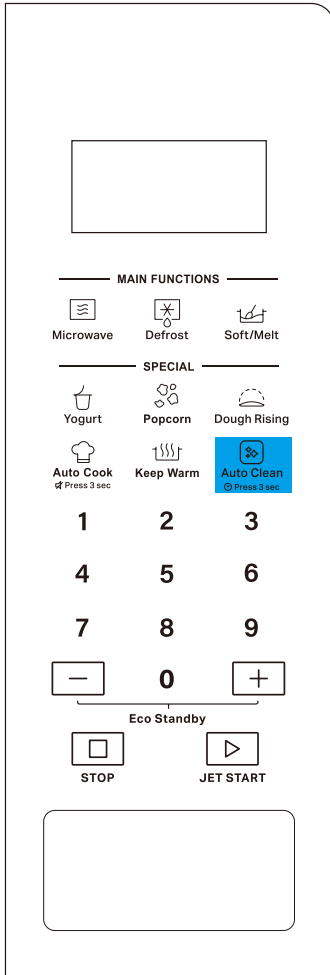

THIS AUTOMATIC CLEANING cycle will help you clean the microwave oven cavity and remove unpleasant odors.

Before starting the cycle:

- 1 Put 300ml water into a container (see our recommendations in below section "Tips and suggestions").
- 2 Place the container directly in the middle of the cavity.

To Start The Cycle:


- 3 Press Auto Clean button, the cleaning cycle duration will be visible on the display.
- 4 Press Jet Start button to start the function.

When The Cycle Is Finished:

- 5 Press Stop button.
- 6 Remove the container.
- 7 Use a soft cloth or a paper towel with mild detergent to clean the interior surfaces.


Tips and suggestions:

- For a better cleaning result, it is recommended to use a container with a diameter of 17-20cm, and a height that is lower than 6.5cm.
- It is recommended to use a container of light plastic material that is suitable for the microwave.
- As the container will be hot after the cleaning cycle is completed, it is recommended to use a heat resistant glove when removing the container from the microwave.
- For a better cleaning effect and removal of unpleasant odors, add some lemon juice or vinegar to the water.

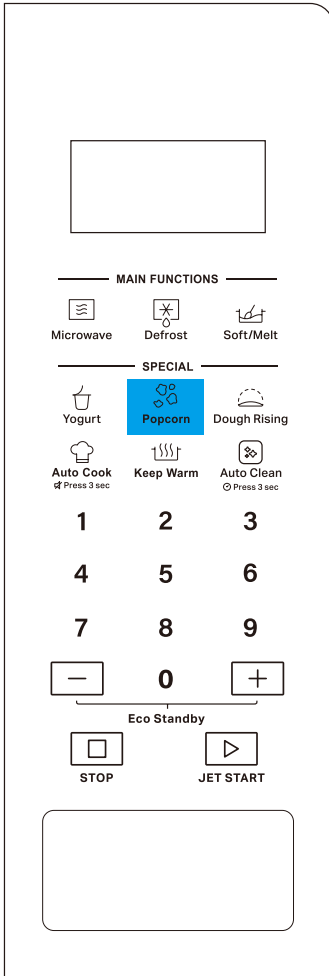

USE THIS FUNCTION for microwave popcorn from supermarket.

- 1 Press Popcorn button, display will show 100g and microwave icon will show on the display and watt icon starts blinking.
- 2 Press the Popcorn button repeatedly, or +/- to select weight between 100g and 80g.
- 3 Press JET START button to start cooking.

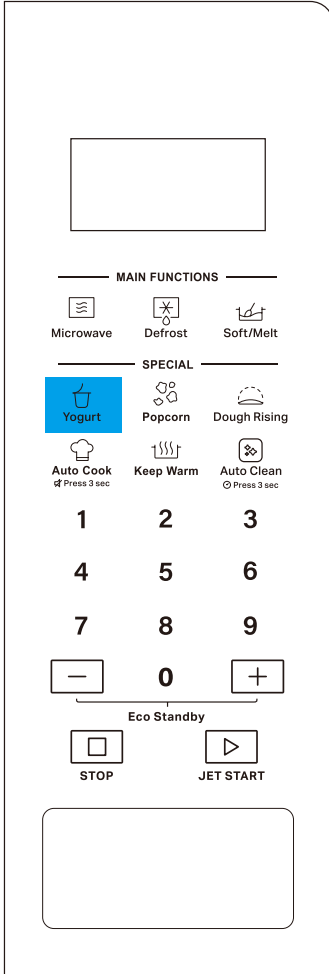

THIS FUNCTION allows you to make healthy and natural yogurt.

- 1 Press the Yogurt button.
- 2 Put 1000g milk and 15g yogurt into a container, then add 50g sugar, mix well. And put into the middle of cavity.
- 3 Press JET START button to start.

NOTE:

It needs 5Hr 20mins for this recipe.

Please do not open the door during countdown.

ENVIRONMENTAL HINTS

- * The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene, etc.) out of the reach of children.
- * This appliance is marked according to the European directive 2012/19/ EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- * The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.
- * Disposal must be carried out in accordance with local environmental regulations for waste disposal.
- * For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.
- * Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.



Technical Specification

Data Description	MWP321IB	MWP421IB
Supply Voltage	220-240V~ 50Hz	220-240V~ 50Hz
Rated Input Power	1600 W	1600 W
Outer dimensions (HxWxD)	310*510*385mm	335*540*420mm
Inner dimensions (HxWxD)	249*362*361mm	277.5*390*390mm
Net weight	10.22Kg	11.45Kg

REGISTER YOUR PRODUCT ONLINE

For Australia Market



Scan QR Code or visit
www.whirlpool.com.au
to register your product warranty online.

This QR Code is only applicable to Australia.

You can download the use manual by

- Visiting our website www.whirlpool.com.au
- Contacting our Customer Service Center at 1300 363 344

For New Zealand Market



Scan QR Code or visit
www.whirlpool.co.nz
to register your product warranty online.

This QR Code is only applicable to New Zealand.

You can download the use manual by

- Visiting our website www.whirlpool.co.nz
- Contacting our Customer Service Center at 0800 442 584

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies

All rights reserved -<http://www.whirlpool.com.au>

-<http://www.whirlpool.co.nz>



Whirlpool