


**Whirlpool**



## **Health & Safety, Use & Care, Installation Guide and Online Warranty Registration Information**

**Model : WS68I9SPX**

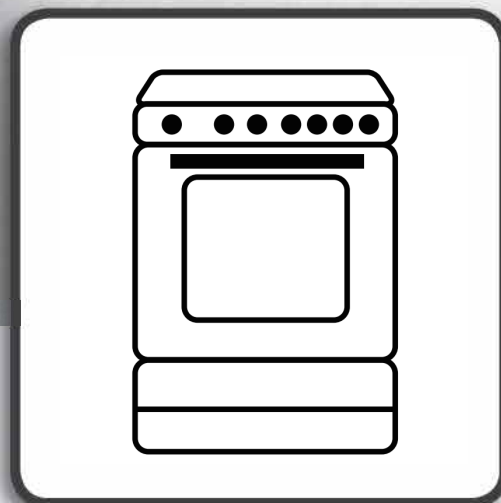

**[www.whirlpool.com.au](http://www.whirlpool.com.au)  
[www.whirlpool.co.nz](http://www.whirlpool.co.nz)**



## **FREESTANDING COOKER USE AND CARE GUIDE**

Dear user,

Thank you for choosing our products. We are sure you will find your new appliance a pleasure to use. Before you use the appliance, we recommend that you read through these instructions carefully and retain them for future reference. Design and specification may change due to product development, no prior notice will be given.

### **Table of Contents**

<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>3</b>
<b>INSTALLATIONS</b>	<b>7</b>
<b>OPERATING INSTRUCTIONS</b>	<b>12</b>
<b>OVEN FUNCTIONS</b>	<b>18</b>
<b>CLEANING &amp; MAINTENANCE</b>	<b>25</b>
<b>COOKING GUIDELINES</b>	<b>30</b>
<b>AFTER-SALES SERVICE</b>	<b>31</b>



---

## IMPORTANT SAFETY INSTRUCTIONS

---

### SAFETY INSTRUCTIONS TO BE READ AND OBSERVED

Before using the appliance, read these safety instructions. Keep them nearby for future reference. These instructions and the appliance itself provide important safety warnings, to be observed at all times. The manufacturer declines any liability for failure to observe these safety instructions, for inappropriate use of the appliance or incorrect setting of controls.

⚠ To maintain the efficiency and safety of this appliance, only call the authorised service centers and always use original spare parts.

⚠ Toddlers (0-3 years) should be kept away from the appliance. Young children (3-8 years) should be kept away from the appliance unless continuously supervised. Children above 8 years old and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.

⚠ **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age must be kept away unless continuously supervised.

⚠ Never leave the appliance unattended during food drying. If the appliance is suitable for probe usage, only use a temperature probe recommended for this oven.

⚠ Keep clothes or other flammable materials away from the appliance, until all the components have cooled down completely. Always be vigilant when cooking foods rich in fat, oil or when adding alcoholic beverages. Use oven gloves to remove pans and accessories. At the end of cooking, open the door with caution, allowing hot air or steam to escape gradually before accessing the cavity so as to prevent burns. Do not obstruct hot air vents at the front of the oven.

⚠ Exercise caution when the oven door is in the open or down position, to avoid hitting the door.

⚠ When handling the appliance, always use the provided handles recessed into the sides of the oven to prevent harming people or damaging the appliance itself.

⚠ Heat will be generated when it is working. Caution must be exercised to avoid touching the heating element.

⚠ Use oven gloves to place cookware in the oven or when removing it.

⚠ Always grip the oven door handle in the center as the extremities of the same may be hot due to any hot air leaks

## PERMITTED USE

⚠ **CAUTION:** The appliance is not intended to be operated by means of an external switching device, such as a timer, or separate remote controlled system. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed & breakfast and other residential environments.

⚠ No other use is permitted (e.g. heating rooms). This appliance is not for professional use. Do not use the appliance outdoors.

⚠ Do not store explosive or flammable substances (e.g. gasoline or aerosol cans) inside or near the appliance.

## INSTALLATION

⚠ The appliance must be handled and installed by two or more persons. Use protective gloves to unpack and install.

⚠ Installation, including water supply (if any), electrical connections and repairs must be carried out by a qualified technician. Do not repair or replace any part of the appliance unless specifically stated in the user manual. Keep children away from the installation site. After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-sales Service. Once installed, packaging waste (plastic, styrofoam parts etc.) must be stored out of reach of children. The appliance must be disconnected from the power supply before any installation operation. During installation, make sure the appliance does not damage the power cable preventing catching fire or electric shock. Only activate the appliance when the installation has been completed.

⚠ Carry out all cabinet cutting operations before fitting the appliance and remove all wood chips and sawdust. Do not obstruct the minimum gap between the worktop and the upper edge of the oven. Do not remove the oven from its polystyrene foam base until the time of installation.

⚠ After installation, the bottom of the appliance must no longer be accessible.

⚠ Do not install the appliance behind a decorative door.

## ELECTRICAL WARNINGS

⚠ The rating plate is on the front edge of the oven (visible when the door is open).

⚠ It must be possible to disconnect the appliance from the power supply by unplugging it if the plug is accessible, or by a multi-pole switch installed upstream of the socket in accordance with the wiring rules and the appliance must be earthed in conformity with national electrical safety standards.

⚠ Do not use extension leads, multiple sockets or adapters. The electrical components must not be accessible to the user after installation. Do not use the appliance when you are wet or barefoot. Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.

⚠ If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard and electric shock. In case of replacement of power cable, contact an authorised service centre.

## CLEANING AND MAINTENANCE

⚠ **WARNING:** Ensure that the appliance is switched off and disconnected from the power supply before performing any maintenance operation; never use steam cleaning equipment - risk of electric shock.

⚠ Do not use harsh abrasive cleaners or metal scrapers to clean the door glass since they can scratch the surface, which may result in shattering of the glass.

⚠ Ensure the appliance is cooled down before any cleaning or maintenance to prevent burns.

⚠ **WARNING:** Switch off the appliance before replacing the lamp.

## TECHNICAL SPECIFICATIONS

Specifications	60cm Induction Freestanding Cooker
Supply Voltage & Frequency	220-240V or 380-415V 3N~, 50-60Hz
Usable Capacity	81L
Oven Input Power	2900-3400W
Induction Hob Input Power	7200W
Maximum Rated Power Input	10100-10600W
Net Weight (kg)	53.5
Gross Weight (kg)	61.5
Product Dimensions (mm)	600 (W) x 600 (D) x 900.2 (H)

Technical specifications can be changed without prior notice to improve product quality.

The values provided with the appliance or its accompanying documents are laboratory readings in accordance with the respective standards. These values may differ depending on the use and ambient conditions.

---

# INSTALLATIONS

---



## INSTALLATION REQUIREMENTS

**THIS COOKER MUST BE INSTALLED BY A QUALIFIED INSTALLER IN ACCORDANCE WITH LOCAL REGULATIONS.**

**IMPORTANT: CONTACT AN AUTHORISED SERVICE AGENT FOR INSTALLATION OF YOUR APPLIANCE!**


### Positioning

1. Make sure that there are no combustible or flammable materials, such as curtains, in the vicinity off installation.
2. Furniture and cabinets surrounding the cooker must be of material resistant to temperature greater than 100°C.
3. Surrounding furniture, cabinets and extractor fans shall be positioned in accordance with the diagram shown in the figure.
4. There must be a least 20mm of free space between the back wall and the rear of the appliance to allow for ventilation and air circulation.
5. If fitted, the extractor fan must be at least 650mm above Induction Cooktop. If no fans in fitted the minimum distance between the Induction Cooktop and any cabinet or other structure must be 750mm.

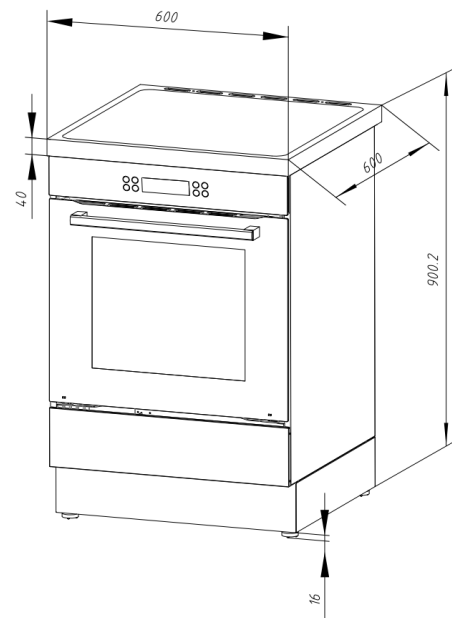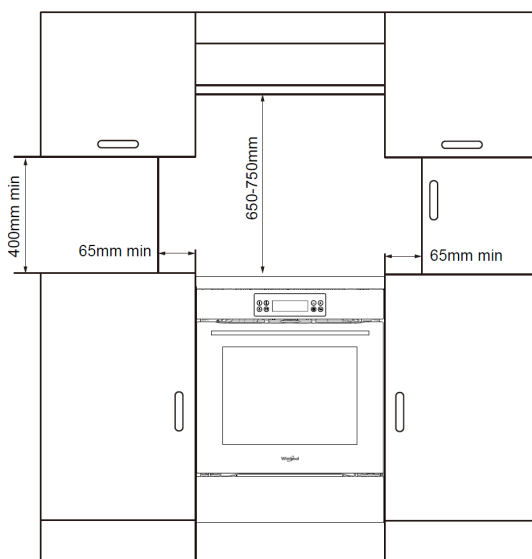

## Levelling feet



The height and level of the appliance can be adjusted by rotating the feet located underneath the appliance at each corner. Rotate the feet to decrease or increase the height.

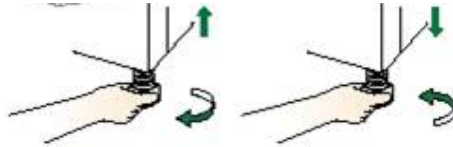

## Safety chain

The appliance must be secured against overbalancing by using the supplied two safety chains on your oven.

Fasten hook (1) by inserting a wall plug into the kitchen wall (5) and connect safety chain (3) to the hook via the locking mechanism (2).

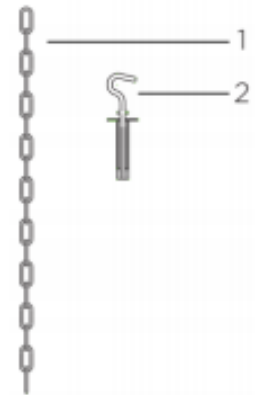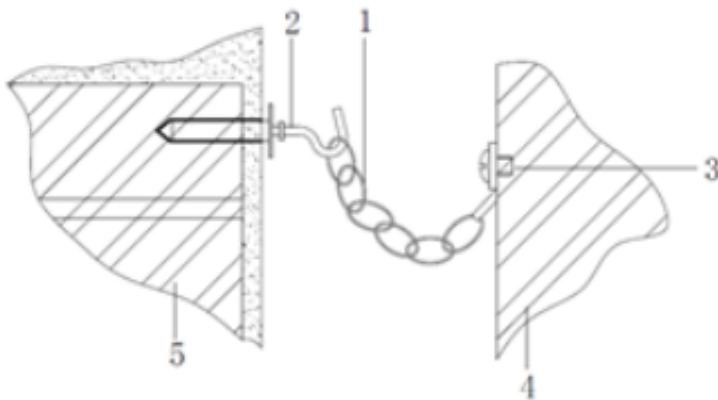

- 1 Safety chain(supplied and mounted to oven)
- 2 Stability hook
- 3 Chain attachment for the rear cooker
- 4 Rear of the cooker
- 5 Kitchen wall




## Electrical Connection

**IMPORTANT:** Electrical connections must be carried out by a suitably qualified person and in accordance with all relevant local building and installation regulations.

### Fitting on a Power Supply Cable

Connecting appropriate power supply · terminal board/ connector block:

- Using a screwdriver, prise on the side tabs of the terminal board cover, pull open the cover of the terminal board.
- Remove the wire clamp screw.
- Fasten the wires beneath the corresponding screw heads.
- Fasten cable clamp and close the cover of the terminal board.

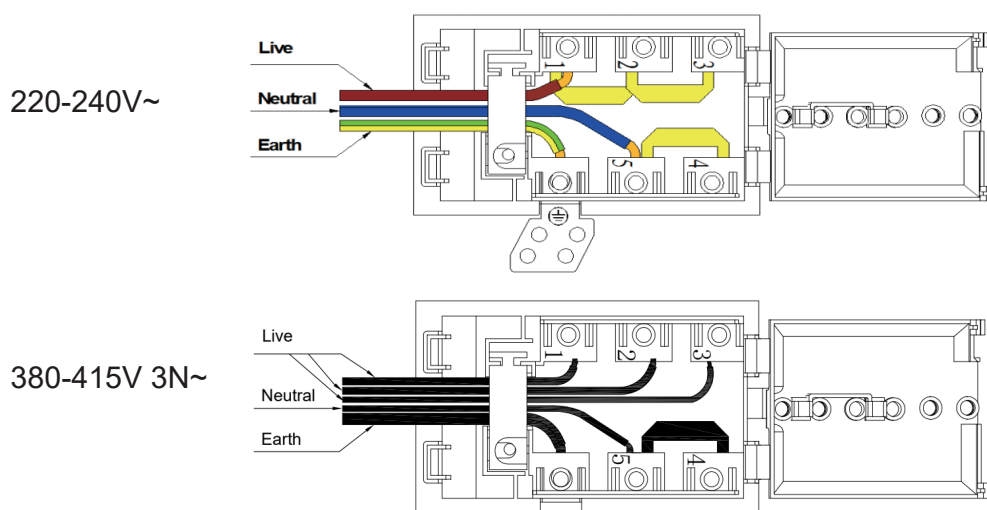

- The AC power supply should be 220-240V or 380-415V 3N~, 50-60Hz. For electric cookers, the minimum 45A fuse, or at least 45A a distribution circuit breaker.

**Warning:** Connect the power cord must be in accordance with the instructions listed in the table below

Wire cross-sectional area(mm2) Connectionmode	L	N	E
1N-	Min4	Min4	Min4

### Connecting the supply cable to the mains

Install an approved circuit breaker with a minimum contact opening of 3 mm, between the appliance and the mains fuse box. The circuit breaker should be sized according to the load and should comply with current regulations (the earth wire should not be interrupted by the circuit breaker).

The supply cable should be positioned so that it does not reach a temperature of more than 50 °C with respect to the room temperature, anywhere along its length. Before switching fuse ON in meter-box check:

- Earth continuity. The electrical safety of this appliance can only be guaranteed if the cooker is correctly installed and earthed, in compliance with regulations on electrical installations.
- The electrical capacity of the system and sockets will support the maximum power of the appliance, as indicated on the data plate.
- Follow safety warnings about installation.

**If this cooking range is to be connected to a new or upgraded electrical installation, then it must be connected to the supply by a supply cord fitted with:**

**an appropriately rated plug that is compatible with the socket-outlet fitted to the final subcircuit in the fixed wiring that supplies this cooking range; or an appropriately rated installation male connector that is compatible with the installation female connector fitted to the final sub-circuit in the fixed wiring that supplies this cooking range. (\*New Zealand only)**

**NOTE:** All Upright cookers must comply to local regulations to Australian Standard AS/NZS 3000:2007 guidelines. Qualified Electrician will have a copy of these guides that MUST be adhered to.

### **Safety warnings about installation**

- The cooker MUST BE installed and serviced only by an authorised person.
- A certificate of compliance must be supplied by installer and is to be kept by the customer.
- The packing materials must be removed before you install the cooker.
- You must follow the installation instructions in this booklet.
- The surrounding kitchen cabinets MUST BE able to withstand 95°C. We will not accept responsibility for damage caused by installation in to kitchen cabinets which cannot withstand 95°C.
- The appliance must not be installed in a corner. It must be installed at least 100mm from the side wall.
- The flexible pipe for gas models must have sufficient loops so the cooker can be moved for service.
- The vents; openings and air spaces MUST NOT be blocked.
- The anti-tilt floor bracket must be installed to avoid accidental tipping.
- The stability bolt must be installed to avoid accidental moving.
- You must not pull the cooker by the door handles.
- If the supply cord or cable is damaged, it must be replaced by an approved service agent or a similarly qualified person in order to avoid a hazard.

## ENVIRONMENTALLY-FRIENDLY DISPOSAL

- The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potential hazardous packaging (plastic bags, polystyrene, etc.) out of the reach of children.
- This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.
- Disposal must be carried out in accordance with local environmental regulations for waste disposal.
- For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchase the product.
- Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.




---

## OPERATING INSTRUCTIONS

---


**Model: WS68I9SPX**

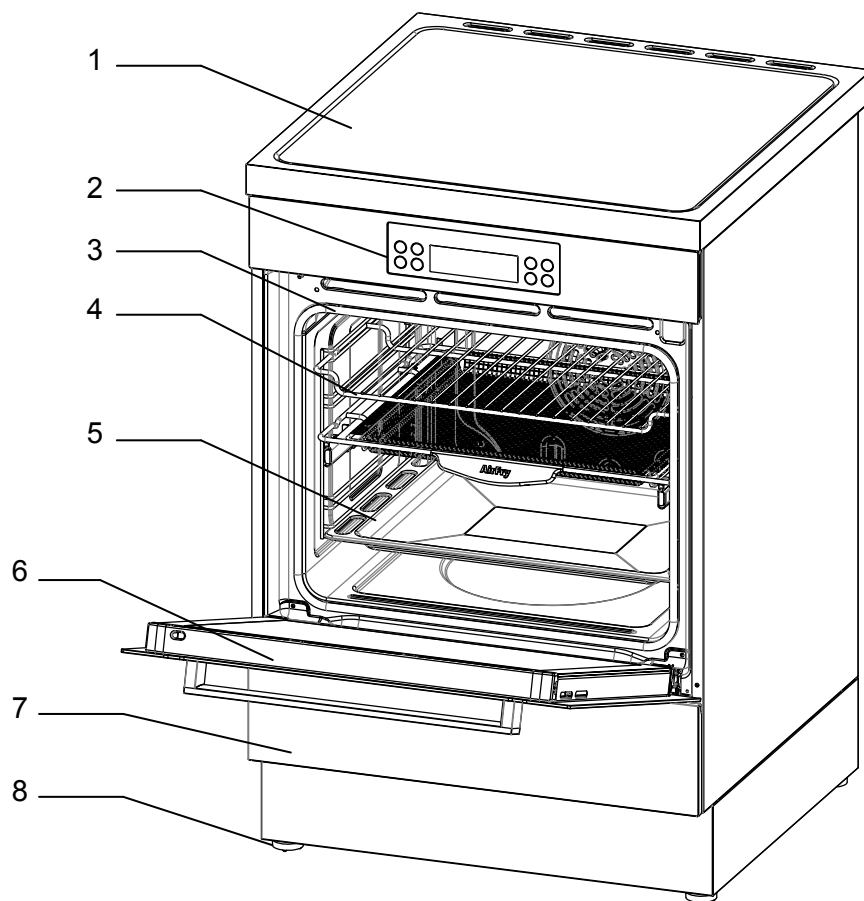

- 1. Induction Cooktop
- 2. Control Panel
- 3. Door Seal
- 4. Shelf
- 5. Baking Tray
- 6. Oven Door
- 7. Drawer
- 8. Fixed Bottom Panel


Note: Above picture is for reference only. The actual appliance maybe slightly different.

## Cooktop Overview

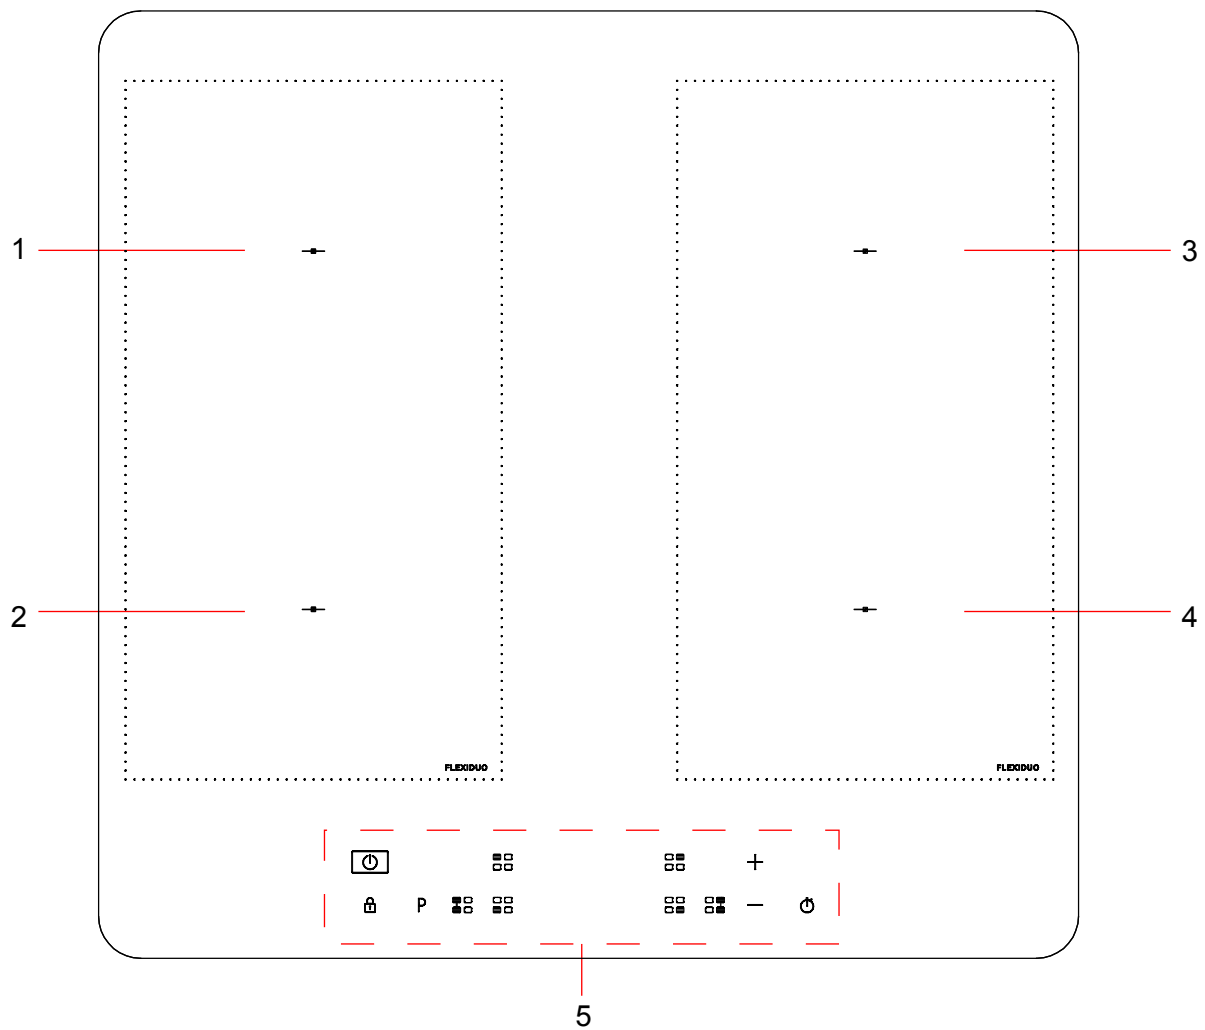


1. 1800/2100 W Heating Zone
2. 1800/2100 W Heating Zone
3. 1800/2100 W Heating Zone
4. 1800/2100 W Heating Zone
5. Induction Cooktop Control Panel

## Induction Cooktop Control Panel

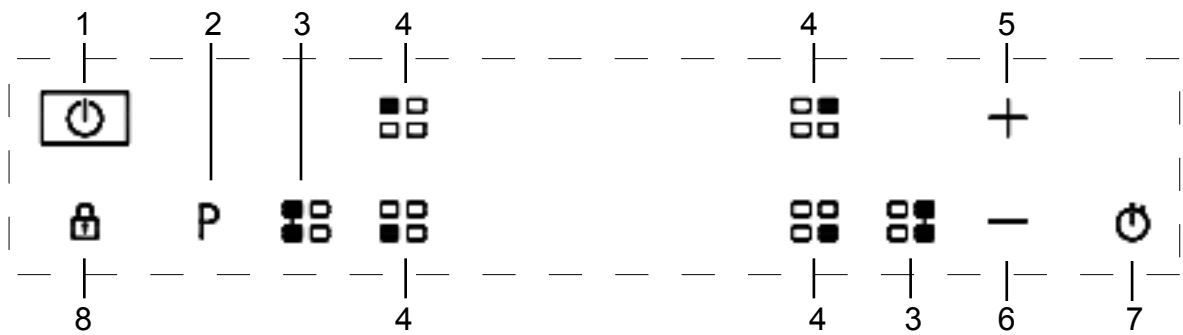

1. ON/OFF control
2. Boost control
3. Flexible zone function
4. Heating zone selection controls
5. Power/Timer control +
6. Power/Timer control -
7. Timer control
8. Lock

## Oven Control Panel

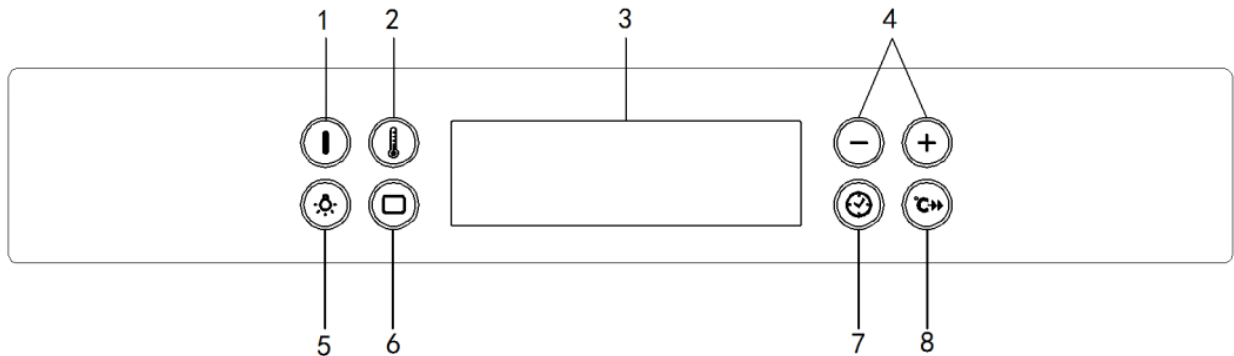

**1. On/Off Button**

For switching the oven on and off for stopping an active function.

**2. Temperature Button**

For accessing the temperature you require when activating functions.

**3. Display**

Shows the current settings of the appliance

**4. Navigation Button**

For increasing/decreasing the settings or values of a function

**5. Lamp Button**

With the oven switched on, press to turn the oven compartment lamp on or off.

**6. Function Button**

For access to the functions and menus.

**7. Time Button**


For accessing the cooking time settings, delayed start and timer. For displaying the time when the oven is off.

**8. Fast Preheat**


For preheating the oven quickly.

## ACCESSORIES

The number and type of accessories may vary depending on which model is purchased. Other accessories that are not supplied can be purchased separately from the After-sales Service.

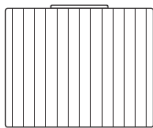

 
**WIRE SHELF** Use to cook food or as a support for pans, cake tins and other ovenproof items of cookware.



**BAKING TRAY\*** Use for cooking all bread and pastry products, but also for roasts, fish en papillote, etc.



 **AIR FRY BASKET\*** Use the Air Fry basket for frozen food such as chips, wedges or chicken nuggets.



**TELESCOPIC RAILS-** To facilitate inserting or removing accessories.

\* Available only on certain models.

### INSERTING THE WIRE SHELF AND OTHER ACCESSORIES

Insert the wire shelf horizontally by sliding it across the shelf guides, making sure that the side with the raised edge is facing upwards. Other accessories, such as the drip tray and the baking tray, are inserted horizontally in the same way as the wire shelf.

### REMOVING AND REFITTING THE SHELF GUIDES

- To remove the shelf guides, lift the guides up and then gently pull the lower part out of its seating: The shelf guides can now be removed.
- To refit the shelf guides, first fit them back into their upper seating. Keeping them held up, slide them into the cooking compartment, then lower them into position in the lower seating.

### FITTING THE TELESCOPIC RAILS

Remove the shelf guides from the oven and remove the protective plastic from the sliding runners. Fasten the upper clip of the runner to the shelf guide and slide it along as far as it will go. Lower the other clip into position. To secure the guide, press the lower portion of the clip firmly against the shelf guide. Make sure that the runners can move freely. Repeat these steps on the other shelf guide on the same level.



---

## FIRST TIME USE

---

Please wipe out the oven interior prior to operation with warm soapy water and polish dry with a soft clean cloth.


### HEAT THE OVEN

A new oven may release odours that have been left behind during manufacturing: this is completely normal. Therefore, before starting to cook food, we recommend heating the empty oven in order to remove any possible odours. Remove any cardboard or transparent film from the oven and remove any accessories from inside it. Heat the oven to 250°C for about half an hour. The oven must be empty during this time. Follow the instructions for setting the function correctly.

Please note: We recommend ventilating the room after using the appliance for the first time.

### Oven shelf positions


- The main oven has 5 shelf positions to choose from. Position 1 is the position at the bottom of the oven and position 5 is located at the highest point of the oven.
- The 5 position side rack system can house both the standard oven shelves and baking tray.

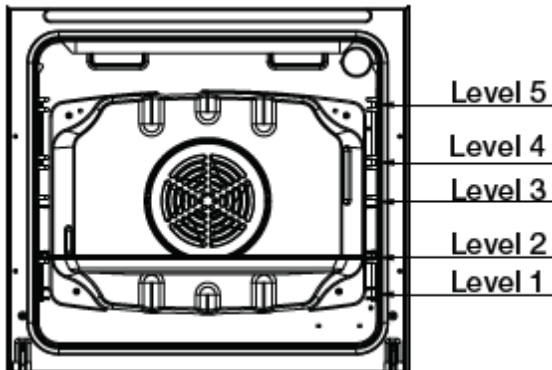

### Fitting oven shelves

- Ensure shelf orientation is correct (refer picture).
- The shelf has a safety bar fitted to reduce the risk of dishes sliding off the shelf, this is the rear of the shelf.
- Slide into oven at an angle until raised back of shelf is past the stop on side runners.
- Lower front of shelf and push in until stop is reached.

Note: The top ledge is not a shelf position

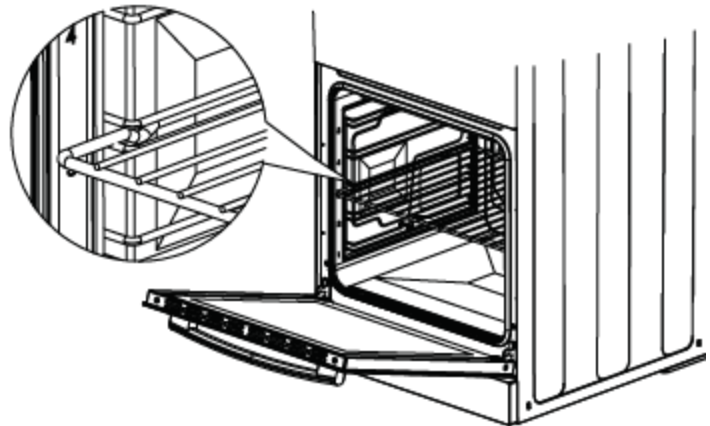













### Oven Safety Warnings


 
- Always follow the instructions for putting the shelves and side racks into the oven, to avoid accidents.
- Do not line the oven with foil, it will damage the enamel.
- Do not place cookwares or anything else on the bottom of conventional oven model as trapped heat will damage the oven.
- Do not touch the hot surfaces or heating elements inside the oven.
- Do not use the oven door as a shelf.
- Do not push down on the open oven door.
- Do not place shelves on top of upper most shelf runner as there are no stops for shelf withdrawal.

## FUNCTIONS & DAILY USE

### FUNCTIONS





	<p><b>CONVENTIONAL</b>          Uses upper and bottom heating element          Select a temperature between 30 °C and 260 °C.          For cooking any kind of dish on one shelf only.</p>
	<p><b>CONVECT BAKE</b>          Uses top and bottom heating elements, together with the fan.          Constant heat distribution throughout the cavity.          Select a temperature between 30 °C and 260 °C.          Recommended for cooking pre packaged food quickly. Best results when cooking, refer to “Practical Cooking Advice”.</p>
	<p><b>FORCED AIR</b>          Uses the heating element from the rear and the fan to ensure delicate even heat distribution throughout the oven.          Select a temperature between 30 °C and 260 °C.          Ideal for baking and cooking delicate food on 3 shelves at the same time.          Recommended for cakes that need to rise, cream puffs, sweet and savory biscuits, savory puffs, swiss rolls, small portions of vegetables au gratin, etc.</p>
	<p><b>PIZZA</b>          Uses forced air and bottom heating elements making it perfect for baking pizza. The fan and heating element works together to circulate hot air          For even cooking and melting toppings, while the bottom heating element ensures a crispy base.</p>
	<p><b>DEFROST</b>          Bottom heating with fan to circulate the air at room temperature.          To speed up defrosting of food especially delicate food (eg. ice cream, cakes, cream, custard desserts, fruit cakes).          For defrosting meat, fish and bread, it is recommended to use “Forced Air” mode (Temperature: 30 °C and 260 °C) to accelerate the process.</p>
	<p><b>GRILL</b>          Uses radiant heat from powerful upper element.          Select a temperature between 80 °C and 230 °C .          Recommended for grilling tender cuts of meat, steak, chops, sausages, fish, cheese toasts.          Preheat the grill for 3 mins to get the best results. Slide the grill dish into either of the 2 spaces within the upper pairs of support rails.</p>

	<p><b>MAXI GRILL</b>          Uses direct radiant heat from 2 powerful upper elements. Cook faster than a normal “Grill”.          Select a temperature between 80 °C and 230 °C.          Recommended for grilling tender cuts of meat, steak, chops, sausages, fish, cheese toasts.          Preheat the grill for 3 mins to get the best results. This will help seal in the natural juices of the meat for a better flavour.</p>
	<p><b>TURBO GRILL</b>          Uses top central heating and fan.          Select a temperature between 80 °C and 230 °C.          Grill element turns on and off to maintain the set temperature while the fan circulates the heat air. Keep the door closed to ensure food is fully cooked.          Recommended for large cuts of meat.          Put the food on the 2nd or 3rd rack from the bottom. Put the deep tray on the lowest shelf to collect the oil or juice.          It is not required to turn the food over when using this mode.</p>
	<p><b>MULTI-COOK</b>          Uses the top and circle heating elements together with the fan.          Select a temperature between 50 °C and 260 °C .          Able to cook various dishes at the same time with the same cooking temperatures. A maximum of 2 racks can be used at the same time.          Recommended for dishes requiring a gratin finish or those requiring prolonged cooking times (eg. lasagna, baked pasta, roast chicken, potatoes, etc.), cooking fish, vegetable-based side dishes and baking leavened cakes.</p>
	<p><b>AIR FRY</b>          Uses the top and circle heating elements together with the fan.          To be used with the air fry basket.          Select a temperature between 150 °C and 230 °C.          Advanced convection cooking function without having to turn the food, giving crispy great tasting results in a shorter time without all the oil.          Suitable for french fries, chicken wings and nuggets.</p>
	<p><b>DELICATE COOK</b>          Uses bottom heating element and fan.          Select a temperature between 50 °C and 230 °C.          Suitable for pastries, cakes and non-dry sweets in baking tins. Excellent results are also obtained in cooking requiring above all heat from the bottom.          Recommended to put the food on a low level.</p>
	<p><b>ECO FORCED AIR</b>          Uses the rear heating element and fan.          Food is prevented from drying out excessively by gentle, intermittent air circulation.          Select a temperature between 40 °C and 230 °C.          When this ECO function is in use, the light will remain switched off during cooking. To use the ECO cycle and therefore optimise power consumption, the oven door should not be opened until the food is completely cooked.          For baking and cooking delicate foods-especially cakes that need to rise-and for the preparation of certain tartlets on 3 shelves at the same time.</p>

	<p><b>SMART CLEAN</b></p> <p>The action of steam released during this special low-temperature cleaning cycle allows dirt and food residues to be removed with ease.</p> <p>Remove all accessories from the oven when activating the Smart Clean function. Pour 150ml of drinking water on the bottom of the oven then set the function to  and temperature to 220°C. Set time to 20-30 minutes. Allow it to cool and wipe with a wet cloth.</p> <p>Note: Activate the function when the oven is cold.</p>
<p>P</p>	<p><b>PYROLYTIC CLEAN</b></p> <p>For eliminating cooking spatters using a cycle at very high temperature.</p>

## DAILY USE



 
### 1. SELECT A FUNCTION

Press  to switch on the oven: the display will show the last running main function or the main menu. The functions can be selected by pressing the  To select an item from a menu (the display will show the first available item), press  or  to select the desired one.




 
### 2. SET A FUNCTION

After having selected the function you require, you can change its settings.

#### TEMPERATURE/GRILL LEVEL





Press  then press  or  to change its setting.

#### DURATION

Press  several times until the  begins to flash on the display. Press  or  to change its setting, the oven will automatically start to work after 3 seconds flash.


 
#### END TIME (START DELAY)


 
In many functions, once you have set a cooking time you can delay starting the function by programming its end time.

Press  several times until the  begins to flash on the display. To set the time you want cooking to end, press  or  to set the required time, then the oven will automatically start to work after 3 seconds flash. Place the food in the oven and close the door: The function will start automatically after the period of time that has been calculated in order for cooking to finish at the time you have set.


### 3. PREHEATING

1. Select the oven function mode then start the program.





2. Short Press the Fast Preheat button , it shall have beep sound after preheating start. At the same time, the Icon  will be shown on the screen. When the temperature reach setting temperature, it will remind with beep sound and icon will be disappear from screen. And Oven model will get back to settled oven function mode.

3. Ongoing Fast Preheat mode can be cancelled with short press Fast Preheat icon , it has beep sound and  disappearance from screen.


Tips:


- A. The following mode is not with Preheating function. 
- B. Only when the oven setting temperature is over 100 degree, then fast preheat works.
- C. If the oven cavity has already reached setting temperature, the fast preheat will not able to start.


### 4. CHILD LOCK

To lock the control panel, press  and  at the same time and hold for 3 seconds, the  will appear on the display. Do this again to unlock the control panel. Please note: This function can also be activated during cooking. For safety reasons, the oven can be switched off at any time by pressing .

## 5. FAVORITES

If you would like to save a function as a favorite and store the current settings for future use, select the function, temperature and cook time/end time (if necessary) and then press and hold the  button for 2 seconds until an audible signal sounds. Please note: The previously saved setting will be overwritten when a new setting is saved.

To call up the function you have saved at a later time, press and hold the  for 3 seconds into the memory function. An audible signal will sound, which indicates that the favorites is set.

Press and hold the  button for another 3 seconds, the memory function is obtained. Wait for another 5 seconds to open the memory function.

## 6. PYRO SELF CLEANING




 

For eliminating cooking spatters using a cycle at very high temperature. Three self-cleaning cycles with different durations are available: High, Medium, Low.


Standard	Degree of self-cleaning	Duration
1	Low	Approx. 2 hours
2	Medium	Approx. 2.5 hours
3	Strong	Approx. 3 hours



We recommend using the quicker cycle at regular intervals and the complete cycle only when the oven is heavily soiled.

- **Do not touch the oven during the Pyro cycle. Keep children and animals away from the oven during and after (until the room has finished airing) running the Pyro cycle.**
- Remove all accessories - including shelf guides - from the oven before activating the function. If the oven is installed below a hob, make sure that all the burners or electric hotplates are switched off while running the self cleaning cycle.
- For optimum cleaning results, remove excessive residuals inside the cavity and clean the inner door glass before using the Pyro function.
- Choose one of the available cycles according to your needs.

Selecting the Pyro self-cleaning function

1. Switch on the oven with press and hold the On/Off  button.
2. Press Navigation button  or  repeatedly until the Automatic self-cleaning ("P"  and "2:00"  appears in the display) function appears.

The default duration time is 2 hours. To start Pyro function, long press  button for 3 seconds.

3. Before program start, Pyro duration time can be adjusted with pressing , 2h, 2.5h, 3h, can be selected. To start Pyro function, long press  button for 3 seconds.

---

## COOKTOP SAFETY

---


- Do not use if the induction glass top is cracked or broken.
- Do not leave aluminum foil on the hot induction hotplates (permanent damage will occur).

NOTE: Stored heat in the hotplate can be used for the last few minutes of cooking. Simply turn off the control.

### Choose the right saucepans

The image below will help you in making sure that the correct saucepans are used on your cooktop.

- Always use pots and pans with flat bottoms. Uneven or thin bottoms will waste energy and cook slowly.
- Always use pots and pans which are slightly larger than the hotplate. Small pans waste energy.
- Always put dry pots and pans on the hotplates.
- Do not use pots and pans which are too large. Pans which overhang the hotplate more than 50 mm can damage the hob
- Check the hotplates on your cooker against the diagrams below before you use your cooker for the first time.

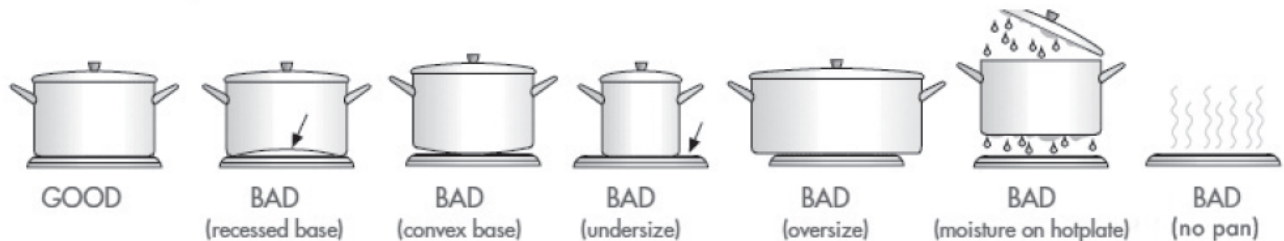

---

## BEFORE FIRST TIME USE

---

- Do not use the cooktop if the glass is cracked.
- The induction cooktop is made from induction glass, a tough, durable material that withstands heating and cooling without breaking. However, there is still chance it may break, as it is glass nature.
- The smooth glass surface has a pattern to show where the heating elements are located under the glass.
- When a induction hotplate is on, the residual heat indicator will on. After switching off, this light will continue to light up until the temperature of the induction hotplate drops below 60°C.



---

## CLEANING & MAINTENANCE

---

Make sure the oven has cooled down before carrying out any maintenance or cleaning. Do not use steam cleaners. Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance. Wear protective gloves. The oven must be disconnected from the mains before carrying out any maintenance work.

### COOKTOP SURFACES

Remove all spilt food with a razor blade scraper while the hotplate is still warm – NOT HOT.

When the induction hotplate has cooled, wipe clean with dishwashing detergent on a damp cloth. If aluminum foil, plastic items or foods with a high sugar content (e.g. jam, tomatoes, carrots, etc.) melt on the glass, use the razor blade scraper to remove immediately before the induction hotplate has cooled down completely, otherwise pitting of the surface may occur.

**Note:** Do not use abrasive sponges or scourers, oven sprays or stain removers on induction hotplates. These may damage, scratch or stain the induction cooktop. Any pitting, staining or scratching will not be covered by warranty.

### EXTERIOR SURFACES

Clean surfaces with a damp microfiber cloth. If they are very dirty, add a few drops of pH -neutral detergent. Finish off with a dry cloth. Do not use corrosive or abrasive detergents. If any of these products inadvertently comes into contact with the surfaces of the appliance, clean immediately with a damp microfiber cloth.

### INTERIOR SURFACES

After every use, leave the oven to cool and then clean it, preferably while it is still warm, to remove any deposits or stains caused by food residues. To dry any condensation that has formed as a result of cooking foods with a high water content, leave the oven to cool completely and then wipe it with a cloth or sponge.


### ACCESSORIES

Soak the accessories in a washing-up liquid solution after use, handling them with oven gloves if they are still hot. Food residues can be removed using a washing-up brush or a sponge.

## REMOVING AND REFITTING THE DOOR


To remove the oven door for better access to the oven when cleaning, follow the below:

- Open the door to the full extent (Fig.1);
- Open the lever A completely on the left and right hinges (Fig.2);
- Hold the door as shown in Fig.3
- Gently close the door (Fig.3) until left and right hinge levers A are hooked to part B of the door (Fig.4).
- Withdraw the hinge hooks from their location following arrow C (Fig.4);
- Rest the door on a soft surface;
- To refit the door, repeat the above steps in reverse order.

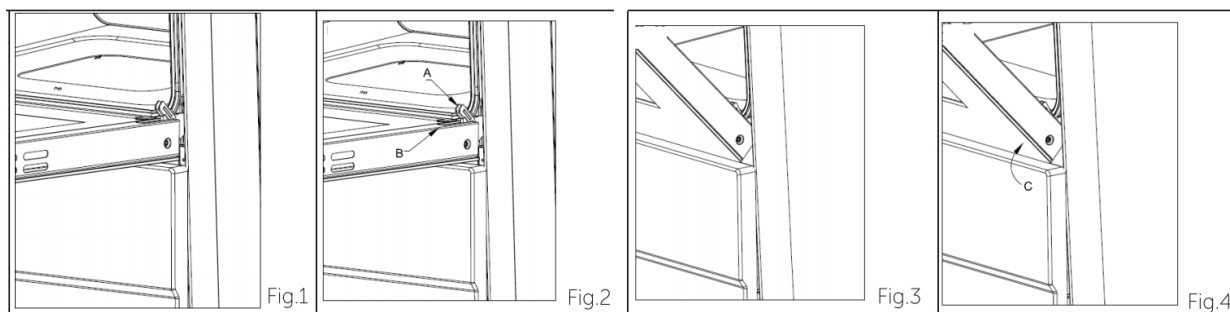

## REMOVING THE INNER PANE OF GLASS

- Double oven door: Remove the seal G by removing 2 screws (Fig.5 & Fig.6)
- Gently pull out the inner layer of glass (Fig.7)
- Clean the glass with an appropriate cleaner. Dry thoroughly, and place on a soft surface.
- Now you can also clean the inside of the outer glass.

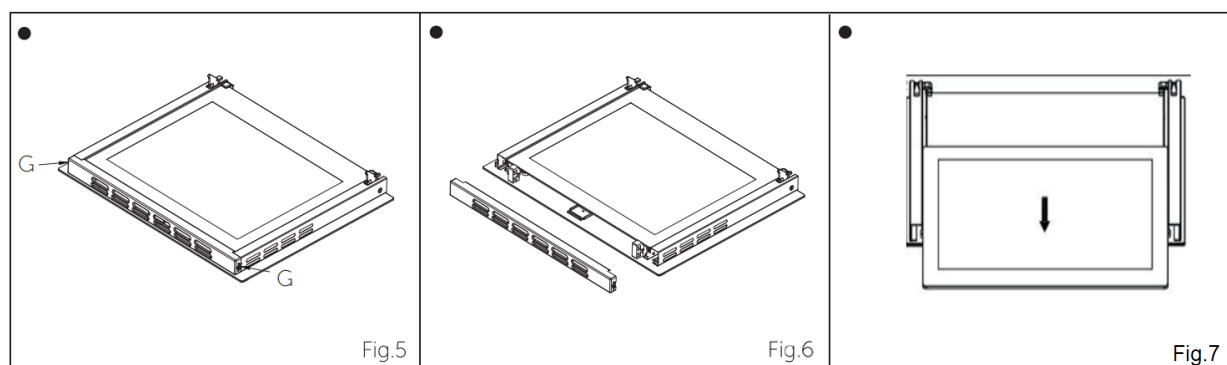


## CLEANING THE DOOR GLASS

- Clean the glass door using non-abrasive products or sponges and dry it with a soft cloth.
- Do not use the oven without the inner door glass installed.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since it may cause scratches on the surface and result in shattering of the glass.

## REMOVING THE SIDE RACKS

Press the two fixed points as the arrow marked below, then the racks will be bent downwards. Take out the side rack and remove it from the fixed points.

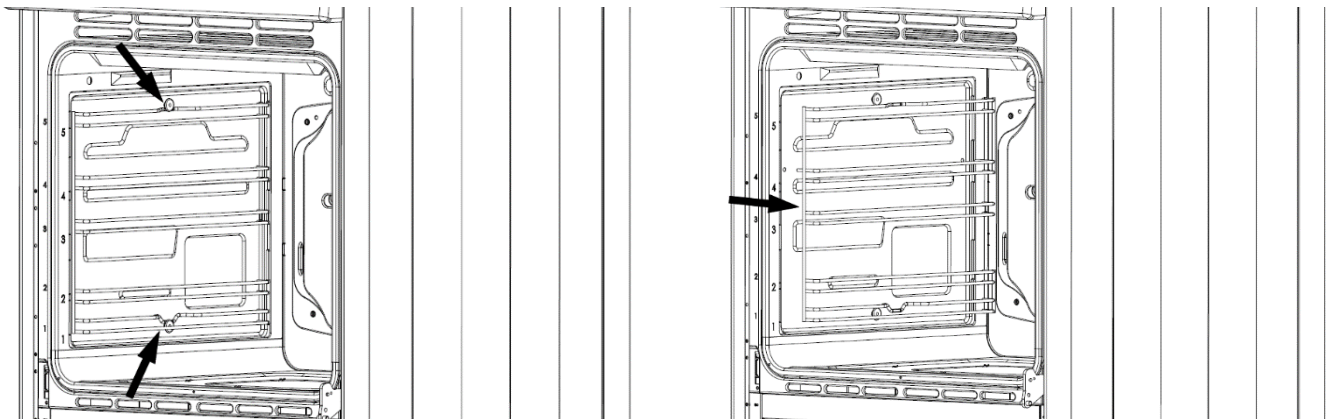

## REPLACING THE TOP LAMP

Disconnect the oven from the power supply by means of the omni polar switch used to connect the appliance to the electrical mains ;or unplug the appliance if the plug is accessible;


- Remove the glass cover of the lamp-holder;
- Remove the lamp and replace with a lamp resistant to high temperatures (300°C) with the following specifications:

Voltage: 220-240V

Wattage: 25W

Type: G9

- Replace the glass cover and reconnect the oven to the mains power supply .

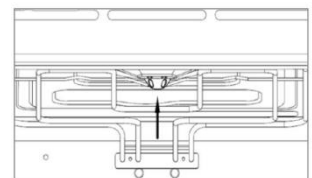

### **Safety Is A Good Habit To Get Into**

To maintain the efficiency and safety of this appliance, we recommend that you do the following:

- only call the Service Centers authorized by the manufacturer
- always use original spare parts
- in case of damage to the power cord, a special purpose cord or component bought from the manufacturer or maintenance department shall be used for replacement

When handling the appliance, we recommend you always use the purpose provided handles recessed into the sides of the oven to prevent harming people or damaging the appliance itself.

- This appliance is designed for non-professional, house-hold use and its functions must not be changed.
- The electrical system of this appliance can only be used safely when it is correctly connected to an efficient earthing system in compliance with current safety standards.
- When the appliance is in use, the heating elements and some parts of the oven door become extremely hot. Make sure you don't touch them and keep children well away.
- Heat will be generated during its working. Caution must be observed to avoid touch of the heating element.

The following items are potentially dangerous, and therefore appropriate measures must be taken to prevent children and the disabled from coming into contact with them:

- Controls and the appliance in general;
- Packaging (bags, polystyrene, nails, etc.);
- The appliance itself, immediately after use of the oven or grill due to the heat generated;
- The appliance itself, when no longer in use (potentially dangerous parts must be made safe).

Avoid the following:

- Touching the appliance with wet parts of the body;
- Using the appliance when barefoot;
- Improper or dangerous operations;
- Obstructing the ventilation or heat dissipation slots;
- Allowing power supply cables of small appliances to come into contact with the hot parts of the appliance;
- Exposing the appliance to atmospheric agents such as rain, or sunlight;
- Using the oven for storage purposes;
- Using flammable liquids near the appliance;
- Using adapters, multiple sockets and /or extension leads;
- Attempting to install or repair the appliance without the assistance of qualified personnel.

Qualified personnel must be contacted in the following cases:

- Installation (following the manufacturer's instructions);
- When in doubt about operating the appliance;
- The temperature probe is a part of the thermostat, if damaged; they shall be replaced overall by authorized service person.

Service Centers authorized by the manufacturer must be contacted in the following cases:

- If in doubt about the soundness of the appliance after removing it from its packaging;
- If the power supply cable has been damaged or needs to be replaced;
- If the appliance breaks down or functions poorly; ask for original spare parts.

It is a good idea to do the following:

- Steam cleaner cannot be used to clean the oven;
- Only use the appliance to cook food and nothing else;
- Check the soundness of the appliance after it has been unpacked;
- Disconnect the appliance from the electrical mains if it is not functioning properly and before cleaning or performing maintenance;
- Use oven gloves to place cookware in the oven or when removing it;
- Always grip the oven door handle in the center as the extremities of the same may be hot due to any hot air leaks;
- Cut the power supply cable after disconnecting it from the mains when you decide not to use the appliance any longer.
- The manufacturer may not be held responsible for any damage due to :Incorrect installation, improper, incorrect and irrational use.

## COOKING GUIDELINES

Dishes	Forced Air			Conventional		
	Thermostat (°C)	Shelf Position	Cook Time (min)	Thermostat (°C)	Shelf Position	Cook Time (min)
Layered Pastry	170 – 190	1, 2 or 3	35 – 45	170 – 190	1 or 2	35 – 45
Cake	150 – 170	1, 2 or 3	30 – 40	170 – 190	1 or 2	30 – 40
Cookie	150 – 170	1, 2 or 3	25 – 35	170 – 190	1 or 2	30 – 40
Grilled Meatballs						
Watery Food	175 – 200	2	40 – 50	175 – 200	2	40 – 50
Chicken				200	1 or 2	45 – 60
Two-tray Cake	160 – 180	1 or 4	30 – 40			
Two-tray Pastry	170 – 190	1 or 4	35 – 45			

Dishes	Turbo Grill			Grill		
	Thermostat (°C)	Shelf Position	Cook Time (min)	Thermostat (°C)	Shelf Position	Cook Time (min)
Layered Pastry	170 – 190	1 or 2	25 – 35			
Cake	150 – 170	1, 2 or 3	25 – 35			
Cookie	150 – 170	1, 2 or 3	25 – 35			
Grilled Meatballs				200	4	10 – 15
Watery Food	175 – 200	2	40 – 50			
Chicken	200	1 or 2		200	Cook with skewer	50 – 60
Two-tray Cake				200	3 or 4	15 – 25
Two-tray Pastry				200	4	15 – 25

Cooking time may vary according to ingredients, food temperature, etc.

When using grill or turbo grill to cook, dripping pan must always be placed on Level 1 (refer to p.17) of oven rack.

Note: Never place anything on the bottom of the cavity when it is in operation because this could damage the enamel cavity. Always place your cookware (dishes, aluminum foil, etc. etc.) on the wire rack provided with the appliance and insert along the side rack.

---

## AFTER-SALES SERVICE

---


To receive complete assistance, please register your product in your local market. Call the number shown on the warranty booklet or follow the website's instructions on:

Australia: [www.whirlpool.com.au](http://www.whirlpool.com.au)

New Zealand: [www.whirlpool.co.nz](http://www.whirlpool.co.nz)

When contacting our Client After-sales service, always specify:

- A brief description of fault;
- The type and exact model of the appliance;
- The serial number (on the rating plate located at the front edge of the oven; visible when the door is open);
- Your full address;
- Your telephone number

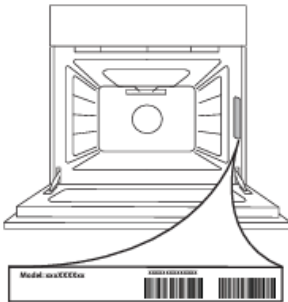

---

## REGISTER YOUR PRODUCT ONLINE

### For Australia Market



Scan QR Code to visit  
[www.whirlpool.com.au](http://www.whirlpool.com.au)  
to register your product warranty online.

This QR Code is only applicable to Australia.

You can download the user manual by

- Visiting our website [www.whirlpool.com.au](http://www.whirlpool.com.au)
- Contacting our Customer Service Center at 1300 363 344

### For New Zealand Market



Scan QR Code to visit  
[www.whirlpool.co.nz](http://www.whirlpool.co.nz)  
to register your product warranty online.

This QR Code is only applicable to New Zealand.

You can download the user manual by

- Visiting our website [www.whirlpool.co.nz](http://www.whirlpool.co.nz)
- Contacting our Customer Service Center at 0800 442 584

---

Whirlpool® Registered Trademark/TM Trademark of Whirlpool group of companies  
All rights reserved - <http://www.whirlpool.com.au>  
- <http://www.whirlpool.co.nz>

**EN**

**Whirlpool**