

Health & Safety, Use & Care, Installation Guide and Online Warranty Registration Information

Model: MWP301IFBA



**www.whirlpool.com.au
www.whirlpool.co.nz**

INDEX

INSTALLATION

Installation	3
--------------	---

SAFETY

Important safety instructions	4
Trouble shooting guide	5
Precautions	6

ACCESSORIES AND MAINTENANCE

Accessories	7
Maintenance & Cleaning	8

CONTROL PANEL

Control Panel & Display Description	9
-------------------------------------	---

GENERAL USE

Stand-by mode	10
Start Protection / Child Lock	10
Pause or Stop cooking	10
Add / Stir /Turn food	10
Shortcut Guide/Clock	11

COOKING FUNCTIONS

Jet Start	12
Microwave	13
Defrost	14
Soft/Melt	15
Yogurt	16
Popcorn	17
Dough rising	18
Auto cook	19
Keep warm	21
Auto clean	22

ENVIRONMENTAL HINTS


Environmental Hints	23
Technical Specifications	23

INSTALLATION

PRIOR TO CONNECTING

Position the microwave oven at a distance from other heating sources. For sufficient ventilation, there must be a space of at least 20 cm above the microwave oven.

The microwave oven should not be placed in a cabinet.

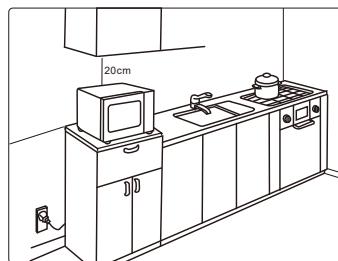

- * Check that the voltage on the rating plate corresponds to the voltage in your home.
- * Place the microwave oven on a stable and even surface that is strong enough to hold the microwave oven and the food utensils you put in it. Use carefully when handling.
- * Ensure that the space underneath, above and around the microwave oven is empty to allow for proper airflow.
- * Ensure that the appliance is not damaged. Check that the microwave oven door is closed firmly against the door support and the internal door seal is not damaged. Empty the microwave oven and clean the interior with a soft, damp cloth.
- * Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.
- * Do not use an extension cord: If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.
- * Do not remove the microwave inlet protection plates located on the side of the oven cavity wall. They prevent grease and food particles from entering the microwave inlet channel

! WARNING:

- * **Improper use of the grounding plug can result in a risk of electric shock.**
- * **Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you have doubts as to whether the microwave oven is properly grounded.**

! NOTE:

Prior to using the microwave for the first time, it is recommended to remove the protective film from the control panel and the cable tie from the power cord.

AFTER CONNECTING

- * The microwave oven can be operated only if the microwave oven door is firmly closed.
- * Poor television reception and radio interference may result if the microwave oven is located close to a TV, radio or aerial.
- * The grounding of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.
- * The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.

SAFETY

IMPORTANT SAFETY INSTRUCTIONS

Read Carefully And Keep For Future Reference

- * If material inside / outside the microwave oven ignites or smoke is emitted, keep microwave oven door closed and turn the microwave oven off. Disconnect the power or shut off power at the fuse or circuit breaker panel.
- * Do not leave the microwave oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

WARNING:

- * If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING:

- * It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which provides protection against exposure to microwave energy.

WARNING:

- * Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING:

- * When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

WARNING:

- * The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements inside the microwave oven.
- * Children shall be kept away unless continuously supervised.
- * The microwave oven is intended for heating foods and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- * This appliance can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- * Cleaning and user maintenance shall not be made by children unless they are supervised. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
- * Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

! NOTE:

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

- * Do not leave the microwave oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!
- * Do not heat, or use flammable materials in or near the microwave oven. Fumes can create a fire hazard or explosion.
- * Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers or other combustible materials. Fire could result.
- * Do not use corrosive chemicals or vapors in this appliance. This type of microwave oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
- * Do not hang or place heavy items on the door as this can damage the microwave oven opening and hinges. The door handle should not be used for hanging things on.

TROUBLE SHOOTING GUIDE

! NOTE:

If the microwave oven does not work, do not make a service call until you have made the following checks:

- * The Plug is properly inserted in the wall socket.
- * The Door is properly closed.
- * Check your Fuses and ensure that there is power available.
- * Check that the microwave oven has ample ventilation.
- * Wait for 10 minutes, then try to operate the microwave oven once more.
- * Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the microwave oven (see Service label).

Consult your warranty booklet for further advice.

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord must only be replaced by a trained service technician.

! WARNING:

- * **Service only to be carried out by a trained service technician.**
- * **Do not remove any cover.**

PRECAUTIONS

GENERAL

This appliance is intended to be used in household and similar applications such as:

- * Staff kitchen areas in shops, offices and other working environments;
- * Farm houses;
- * By clients in hotels, motels and other residential environments;
- * Bed and breakfast type environments.

No other use is permitted (e.g. heating rooms).

! NOTE:

- * The appliance should not be operated without food in the microwave oven when using microwaves. Operation in this manner is likely to damage the appliance.
- * The ventilation openings on the microwave oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the microwave oven and poor cooking results.
- * If you practice operating the microwave oven, put a glass of water inside. The water will absorb the microwave energy and the microwave oven will not be damaged.
Note: please refer to below section "Liquids".
- * Do not store or use this appliance outdoors.
- * Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar area.
- * Do not use the cavity for any storage purposes.
- * Remove wire twist-ties from paper or plastic bags before placing bag in the microwave oven.
- * Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.
- * Use hot pads or microwave oven mitts to prevent burns, when touching containers, microwave oven parts, and pans after cooking.

LIQUIDS

Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.

To reduce the risk of injury to persons:

- * Do not overheat the liquid.
- * Stir the liquid both before and halfway through heating it.
- * Do not use straight-sided containers with narrow necks
- * After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- * Use extreme care when inserting a spoon or other utensil into the container.

CAREFUL

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

Always refer to a microwave cookbook for detail. Especially, if cooking or reheating food that contains alcohol. Ensure the lid and the teat is removed before heating.

ACCESSORIES AND MAINTENANCE


ACCESSORIES

- * There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.
- * Ensure that the utensils you use are microwave oven proof and allow microwaves to pass through them before cooking.
- * When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the microwave oven.
- * This is especially important with accessories made of metal or metal parts. If accessories containing metal come into contact with the microwave oven interior, while the microwave oven is in operation, sparking can occur and the microwave oven could be damaged.
- * Metallic containers for food and beverage are not allowed during microwave cooking.
- * For better cooking performance, it is suggested that you need to put the accessories in the middle of the inner full flat cavity.


MAINTENANCE & CLEANING

- * Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- * Do not use metal scouring pads, abrasive cleansers, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior microwave oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.
- * Use a soft and damp cloth with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.
- * Do not use steam cleaning appliances when cleaning your microwave oven.
- * The microwave oven should be cleaned regularly and any food deposits removed.
- * Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.
- * Do not spray directly on the microwave oven.
- * This microwave oven is designed to operate cooking cycles with a proper container in a fully flat cavity directly.
- * Do not allow grease or food particles to build up around the door, and inlet protection plates located on the side of the oven cavity wall.
- * This product offers an AUTO CLEAN function, which allows for easy cleaning of the microwave cavity. For more details, please refer to the AUTO CLEAN section on page 22.

CONTROL PANEL & DISPLAY DESCRIPTION

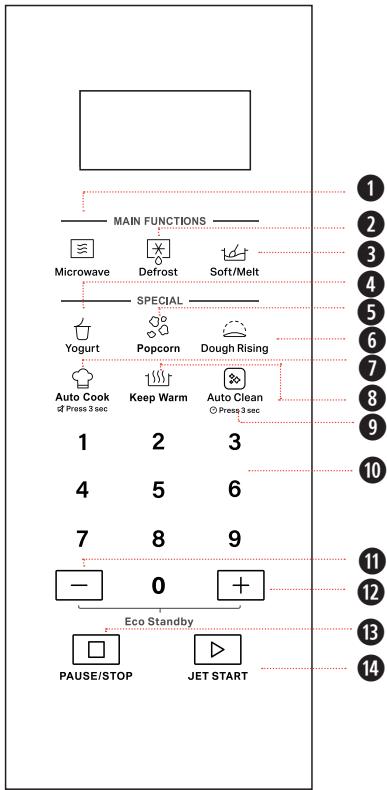

- 1 Microwave - Use to set power level.
- 2 Defrost function.
- 3 Soft/Melt.
- 4 Yogurt - To set Yogurt function.
- 5 Popcorn function.
- 6 Dough Rising function.
- 7 Auto Cook - Use to access the automatic recipes menu.
Press 3 sec - Mute On/Off
- 8 Keep Warm.
- 9 Auto Clean - Use to clean oven
Press 3 sec - Use to set clock.
- 10 0-9 keypad input.
- 11 12 +/- - Use to input food menu code, clock time, cook time, cook weight.
- 13 PAUSE/STOP - Use to pause, stop or cancel cooking.
- 14 JET START - Use to start cooking or 30 sec Quick Start at Standby mode, or use to confirm selection.

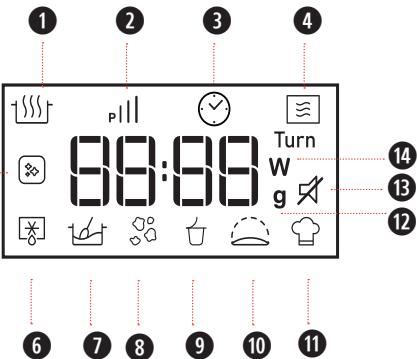

- 1 Keep warm Icon
- 2 Microave power Icon
- 3 Clock Icon
- 4 Microwave Icon
- 5 Auto clean Icon
- 6 Defrost Icon
- 7 Soft/Melt Icon
- 8 Popcorn Icon
- 9 Yogurt Icon
- 10 Dough rising Icon
- 11 Auto cook Icon
- 12 Weight (grams) Icon
- 13 Mute Icon
- 14 Microwave power (watt) Icon



STAND-BY MODE

The oven is in Stand-by mode when the clock is displayed (or, if the clock has not been set, when the display will show ":").

ECO STANDBY: The function is set in order to have power saving. During Standby mode, you can press "+" and "-" buttons simultaneously to enter ECO STANDBY mode. After cooking end, the display will show time or ":" for 10 seconds then go to ECO STANDBY mode. Press the two buttons again to quit the mode.



START PROTECTION / CHILD LOCK

This automatic safety function is activated one minute after the oven has returned to "Stand-by mode".

When the safety function is active the door must be opened and closed in order to start the cooking, otherwise the display will show "door".

door



PAUSE OR STOP COOKING

To pause cooking:

The cooking can be paused to check, add or turn or stir the food by opening the door. The function will be stopped if to press PAUSE/STOP button during cooking. The setting will be maintained for 5 minutes.

To continue cooking:

Close the door and press the Jet Start button. The cooking is resumed from where it was paused.

If you don't want to continue cooking you can:

Remove the food, close the door and press the Stop button.

When the cooking is finished:

The display will show the text "End". An acoustic beep will signal once a minute for 5 minutes. Please note that reducing or stopping this programmed cooling cycle will not have a negative impact on the function of the product.



ADD / STIR / TURN FOOD

Depending on the selected function, it could be needed to add / stir / turn food during cooking. In these cases the oven will pause cooking and it will ask you to perform the needed action.

When required, you should:

- * Open the door.
- * Add or Stir or Turn the food (depending on the required action).
- * Close the door and restart by pressing Jet Start button.

Notes: if the door is not opened within 4 minutes from the request to Add or Stir or Turn the food, the microwave oven will enter into standby mode.



Mute On/Off

Press AUTO COOK for 3 sec to activate this function, and press 3 sec again to deactivate.

► Shortcut Guide

Cook Time Setting Shortcut

*For full power(1000W) cooking only

Method 1:

Directly input cooking time with 0-9 keypad, then press "Start"

Method 2:

Press "+" and hold until you desire cook time is reached, then press "►" to start cooking


Method 3:

Press "►" to start cooking for 30 sec first, then use "►" to add cook time at 30 sec interval, microwave oven will follow the new cook time to operate

Add/ Reduce Cook Time during cooking

Using Method 2 and Method 3 started above can increase cook time when microwave is in operation. Cook time can also be reduced by pressing "-" during cooking.

🕒 CLOCK

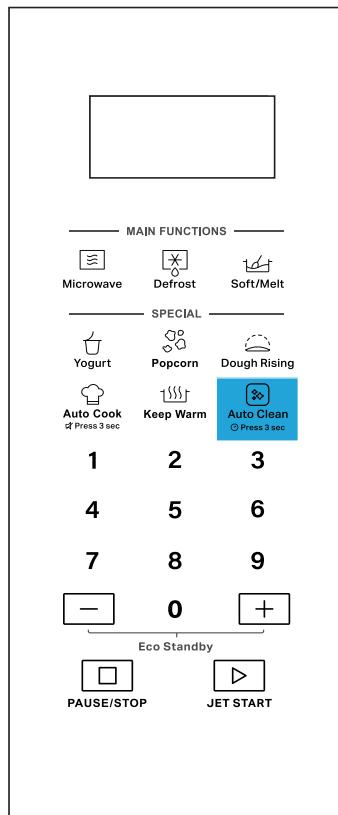

To set the Clock of your appliance:


- 1 In standby, press the Auto Clean button for 3 seconds. The display shows the current clock.
- 2 Press + / - to set the hour.
- 3 Press JET START button to confirm.
- 4 Press + / - to set the minute.
- 5 Press JET START to confirm the setting.

ℹ️ Tips and suggestions:

- When plug in, the screen shows "12:00" ("12" flashing), 1 minute later return to standby (before returning standby can directly set clock).
- In the process of cooking, press PAUSE/STOP button once to pause, press JET START button to continue cooking, but press PAUSE/STOP twice to cancel this program.
- In the process of cooking set, no operating system automatically return to standby mode in 1 minute.



JET START

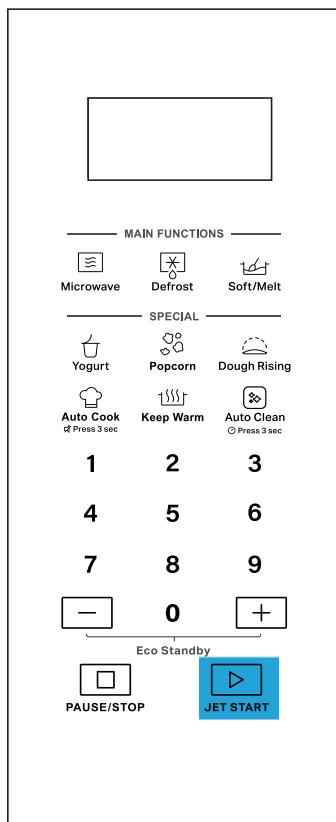

THIS FEATURE ALLOWS YOU to start the oven quickly. Press JET START button once, the oven starts to work at full power level. During cooking, press JET START to add time at 30 seconds interval.

- 1 Press the JET START Button.

! NOTE:


Pressing the JET START button, the Microwave function will start at full microwave power (1000W) for 30 seconds.

i Tips and suggestions:

- During the cooking it is not possible to change the cooking function but cooking time can be changed.
- To change the cooking time, please press +/- button. Or press the JET START button once to increase the duration time by 30 seconds.



MICROWAVE

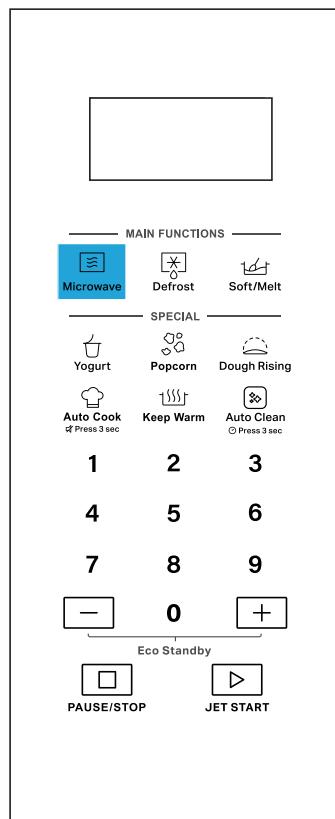

To cook **WITH** microwave power individually, press the Microwave button repeatedly to select a cooking power level, then press **+-** button to set a desired cooking time. The longest cooking time is 90 minutes.

Suggested Accessory:



Plate Cover (sold separately)

- 1 Press the Microwave button. The default power level (750W) will be shown on the display and the watt icon starts blinking.
- 2 Press the Microwave button repeatedly or press **+-** button to select suitable cooking power, then press JET START button.
- 3 Press **+-** or 0-9 keypad to set the cooking time, then press JET START button to start cooking.


! NOTE:

If need to change the power, press the Micro button again, the desired power level can be selected as below table.

POWER	SUGGESTED USE:
90 W	Softening ice cream, butter and cheeses. keep warming.
160 W	Defrosting.
350 W	Simmering stews, melting butter.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
650 W	Cooking dishes, not possible to stir.
750-800 W	Cooking of fish, meat, vegetables, etc.
900-1000 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.



DEFROST

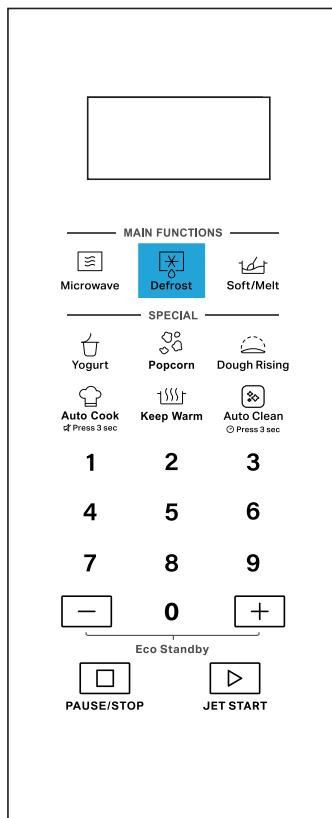

USE THIS FUNCTION for defrosting Meat, Poultry, Fish, and vegetables.


- 1 Press the Defrost button.
- 2 Press Defrost button repeatedly or +/- button to select food category in below table and press JET START to confirm.
- 3 For d01, press +/- or 1-5 button to set cooking time and press JET START button to start. For d02-d05, press +/- or 0-9 keypad button to set the weight, and press JET START button to start.

FOOD TYPE	WEIGHT	SUGGESTED USE
d01	/	
d02	100g - 2000g	Minced meat, cutlets, steaks or roasts. After cooking, allow food to rest for at least 5 minutes for better results.
d03	100g - 1000g	Larger, medium and small cut vegetables. Before serving, allow food to rest for 3-5 minutes for better results.
d04	100g - 2000g	Whole steaks or fish fillet. Allow food to rest for 5-10 minutes for better results.
d05	100g - 2000g	Whole chicken, pieces or fillets. After cooking, allow food to rest for 5-10 minutes for better results.



Tips and suggestions:

- If the food is warmer than deep-freeze temperature (-18°C), choose a lower weight than the food.
- If the food is colder than deep-freeze temperature (-18°C), choose a higher weight than the food.
- Separate pieces as they begin to defrost. Individual slices defrost more easily.
- Standing time after defrosting always improves the result since the temperature will then be evenly distributed throughout the food.

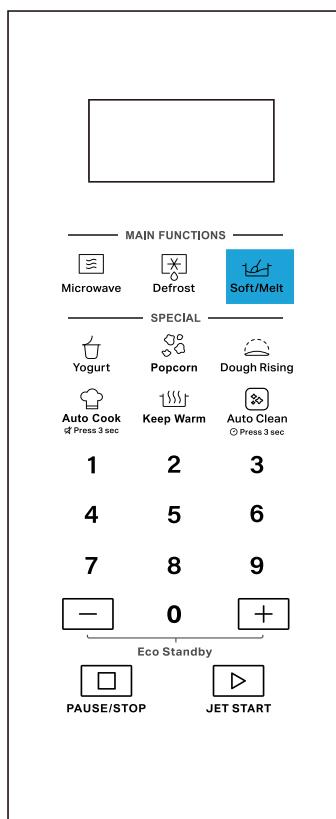

A SELECTION OF AUTOMATIC RECIPES with preset values to offer optimal cooking results.

- 1 Press the Soft/Melt button.
- 2 Press Soft/Melt button repeatedly or press +/- button or 1-8 keypad button to select the desired recipe (see the table below).
- 3 Press the JET START button to confirm the recipe and press +/- button to select the weight when there is a weight range in the table.
- 4 Press the JET START button. The function will start.


! NOTE:

The cooking recipe will be confirmed once you leave the function button for 3 Seconds, press the function key again to change the recipe type.

FOOD TYPE			WEIGHT	HINT
SL01	Soften		Butter 50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
SL02	Soften		Ice Cream 100g - 1000g/50g	From frozen state, place ice cream container onto cavity.
SL03	Soften		Cream Cheese 50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
SL04	Soften		Frozen Juice 250g - 1000g /250g	From frozen state, remove lid from container.
SL05	Melting		Butter 50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
SL06	Melting		Chocolate 100g - 500g/50g	From room temperature, place in microwave safe dish.
SL07	Melting		Cheese 50g - 500g/50g	From refrigerator state, place in microwave safe dish.
SL08	Melting		Marshmallows 100g - 500g/50g	From room temperature, place in microwave safe dish. The dish should be at least double volume with the marshmallows since they are expanded during cooking.



YOGURT

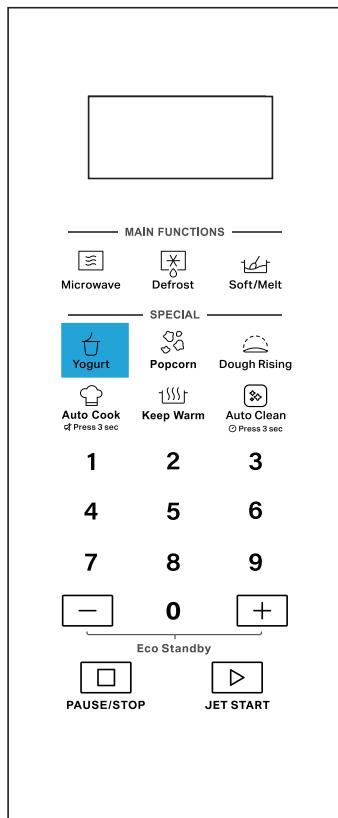


THIS FUNCTION allows you to make healthy and natural yogurt.

- 1 Press the Yogurt button.
- 2 Put 1000g milk and 1g yogurt starter (heating resistance) or 15g yogurt into container, then add 50g sugar, mix well. And put into the middle of cavity.
- 3 Press the JET START button to start.

If yogurt came out to be too runny or not in an ideal texture, you may repeat Yogurt function one more time for a better result.

Please do not open the door during the countdown.

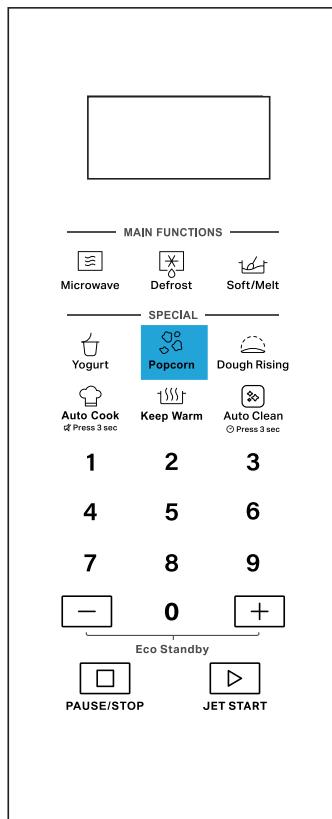


THIS FUNCTION allows you to make popcorn.

- 1 Press the Popcorn button.
- 2 Put +/- or Popcorn button repeatedly, or +/- to select weight between 100g and 80g.
- 3 Press the JET START button to start.

Popcorn will be using full power and for 80g popcorn the working time will be 1 minute 30 seconds, for 100g popcorn it takes 1 minute 50 seconds.



DOUGH RISING

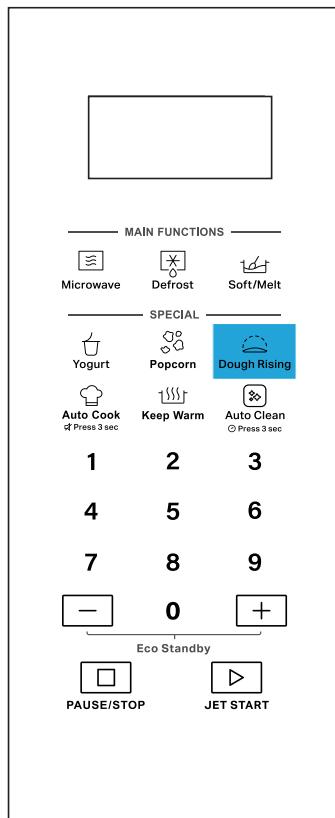

THIS FUNCTION ALLOWS you to have bread dough rising.

- 1 Put 200ml water into a container.
- 2 Place the container directly on the middle of the cavity.
- 3 Press the Dough Rising button.
- 4 Press the JET START button. The function will start.

When the clock counted down to 50 minutes, the display shows "Add" (no operation for 5 minutes automatically return to standby).

- 5 Open the door, remove the water container, put the dough onto the middle of the cavity plate.
- 6 Close the door, press JET START button to start


! NOTE:

Don't open the door during the countdown.

The volume of the container should be at least 3 times of the dough



AUTO COOK MENU

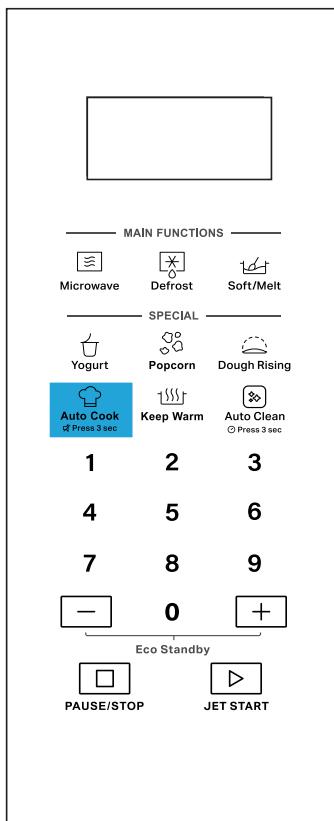

A SELECTION OF AUTOMATIC RECIPES with preset values to offer optimal cooking results.

- 1 Press the Auto Cook button.
- 2 Press Auto Cook button repeatedly or press +/- button or 1-7 keypad button to select the desired recipe (see the table following).
- 3 Press the JET START button to confirm the recipe and press +/- button to select the weight within the weight range in the table.
- 4 Press the JET START button. The function will start.

! NOTE:

According to the selected recipe, after a certain time, the display would ask you to add or turn or stir the food. See "Add/Stir/Turn food" chapter on page 10.

! NOTE:


The cooking recipe will be confirmed once you leave the function button for 3 Seconds, press the function key again to change the recipe type.



Auto cook menu for model MWP301IFBA

RECIPE	CODE	INITIAL STATE	AMOUNT	DURATION
Fish fillet	P01	Room temperature	200-500g /100g	2-6min.
Oatmeal	P02	Room temperature	1,2,3,4 portions	1 min 30 sec - 4 min 30 sec
Vegetable	P03	Room temperature	200-600g /100g	3-7 min.
Potato	P04	Refrigerator temperature	250g, 500g, 750g	7-20 min.
Pasta	P05	Room temperature	50g, 100g, 150g	12-18 min.
Pizza reheat	P06	Refrigerator temperature	200g, 400g	1min-2 min 30 sec.
Beverage	P07	Room temperature	1,2,3 cups	1 min-4 min 30 sec.

KEEP WARM

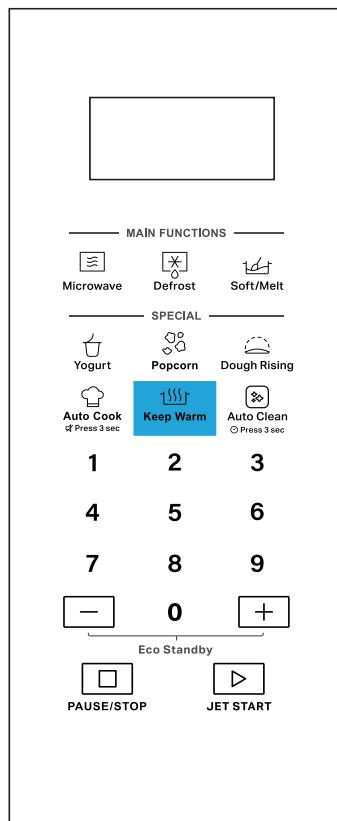

THIS FUNCTION ALLOWS YOU to keep your dishes warm

Suggested Accessory:



Plate Cover(sold separately)


- 1 Press the Keep Warm button.
- 2 Press +/- or Keep Warm button repeatedly to select suitable time(15, 30, 45 or 60min), then press JET START button to start cooking.

! NOTE:

The keep warm cycle last for a duration of 15minutes(default is 30 minutes), the maximum time is 60 min.



AUTO CLEAN

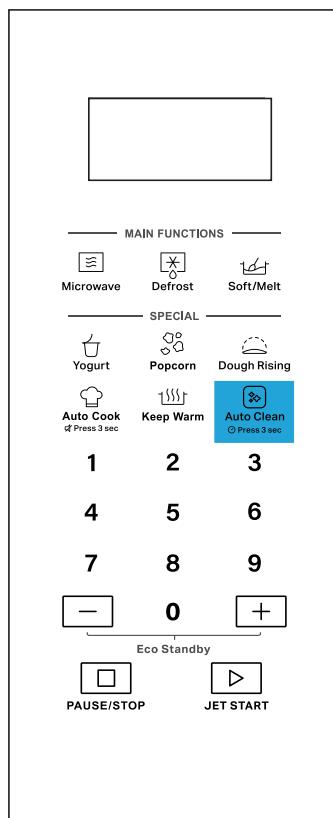

THIS AUTOMATIC CLEANING cycle will help you to clean the microwave oven cavity and remove unpleasant odors.

Before starting the cycle:

- 1 Put 250ml water into a container (see our recommendations in the below section "Tips and suggestions").
- 2 Place the container directly in the middle of the cavity.

To Start The Cycle:

- 3 Press the Auto Clean button, the cleaning cycle duration will be visible on the display.
- 4 Press the Jet Start button to start the function.

When The Cycle Is Finished:

- 5 Press the PAUSE/STOP button.
- 6 Remove the container.
- 7 Use a soft cloth or a paper towel with mild detergent to clean the interior surfaces.

Tips and suggestions:

- For a better cleaning result, it is recommended to use a container with a diameter of 17-20cm, and a height that is lower than 6.5cm.
- It is recommended to use a container of light plastic material that is suitable for the microwave.
- As the container will be hot after the cleaning cycle is completed, it is recommended to use a heat resistant glove when removing the container from the microwave.
- For a better cleaning effect and removal of unpleasant odors, add some lemon juice or vinegar to the water.

ENVIRONMENTAL HINTS

- * The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene, etc.) out of the reach of children.
- * This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- * The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.
- * Disposal must be carried out in accordance with local environmental regulations for waste disposal.
- * For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.
- * Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.



Technical Specification

Data Description	MWP301IFBA
Supply Voltage	230-240V~50 Hz
Rated Input Power	1500 W
Outer dimensions (HxWxD)	312 x 539 x 391
Inner dimensions (HxWxD)	240 x 354 x 358

REGISTER YOUR PRODUCT ONLINE

For Australia Market



Scan QR Code to visit
www.whirlpool.com.au
to register your product warranty online.

This QR Code is only applicable to Australia.

You can download the user manual by

- Visiting our website www.whirlpool.com.au
- Contacting our Customer Service Center at 1300 363 344



Scan QR Code to visit
www.whirlpool.co.nz
to register your product warranty online.

This QR Code is only applicable to New Zealand.

You can download the user manual by

- Visiting our website www.whirlpool.co.nz
- Contacting our Customer Service Center at 0800 442 584

Whirlpool® Registered Trademark/TM Trademark of Whirlpool group of companies

All rights reserved - <http://www.whirlpool.com.au>

- <http://www.whirlpool.co.nz>

EN

Whirlpool