



W Collection

W4OMK581HU1BAUS

60CM AIR FRY MULTI-FUNCTION SMART HYDROLYTIC CLEAN OVEN IN BLACK

FEATURES & BENEFITS



AIR FRY

Crisp up foods with minimal oil. Ideal for cooking frozen foods, such as fries and chicken nuggets, as well as fresh items like vegetables, meats and fish.



COOK 3

Allows 3 different dishes to be cooked simultaneously on different levels, thanks to a special airflow that prevents aromas and flavours from mixing - saving time and energy.



 
FORCED AIR

Seal in the taste. Thanks to the Forced Air technology, preheated air is circulated inside your oven using an innovative convection system, giving you moist, juicy, cooking results.



SMART CLEAN

Innovative SmartClean technology cleans the oven thoroughly and efficiently, leaving no odours and without requiring a detergent. SmartClean technology works together with an easy-to clean special enamel and offers a dedicated cycle that always delivers perfect cleaning results.



TELESCOPIC RAILS

Extremely helpful for checking how the cooking is coming along, allow to easily insert, slide out or remove grids and casseroles.




WARRANTY

5 Year warranty on parts and labour.


TECHNICAL SPECIFICATIONS

COLOUR/FINISH	Black
DISPLAY	LED Digital
CONTROL	Push Knobs
DOOR / HANDLE DESIGN	Double Glass Door with Black Handle
CAVITY TYPE	Enamelled
CAPACITY	71 litres
COOKING SHELVES	5 shelves
WEIGHT	26.9kg
PRODUCT DIMENSION	W 595mm x H 595mm x D 551mm
CUT OUT DIMENSION	W 560mm x H 583mm x D 560mm
HEATING TEMPERATURE	50°C to 250°C
FUNCTIONS	Conventional, Forced Air, Grill, Turbo Grill, Bottom Heating, Rising, Air Fry, Pizza, Eco Forced Air, Maxi Cooking, Bread AUTO, Cake AUTO, Delay Start
CLEANING	Smart Clean (Hydrolytic)
ENERGY CONSUMPTION	TBC
ACCESSORIES	2 Wire Shelf, 1 Baking Tray, 1 Deep Tray, 1 Pair of Telescopic Rails, Air Fry Basket
MAX. TOTAL POWER	2900W
VOLTAGE	220-240 V
CURRENT	13 amp
ELECTRICAL CORD	100cm
PACKAGING DIMENSIONS	W 640mm x H 670mm x D 650mm
GROSS WEIGHT	28.2kg
NET WEIGHT	26.9kg
PLACE OF MANUFACTURE	Poland
WARRANTY	Five Year Parts and Labour

 INSTALLATION GUIDE

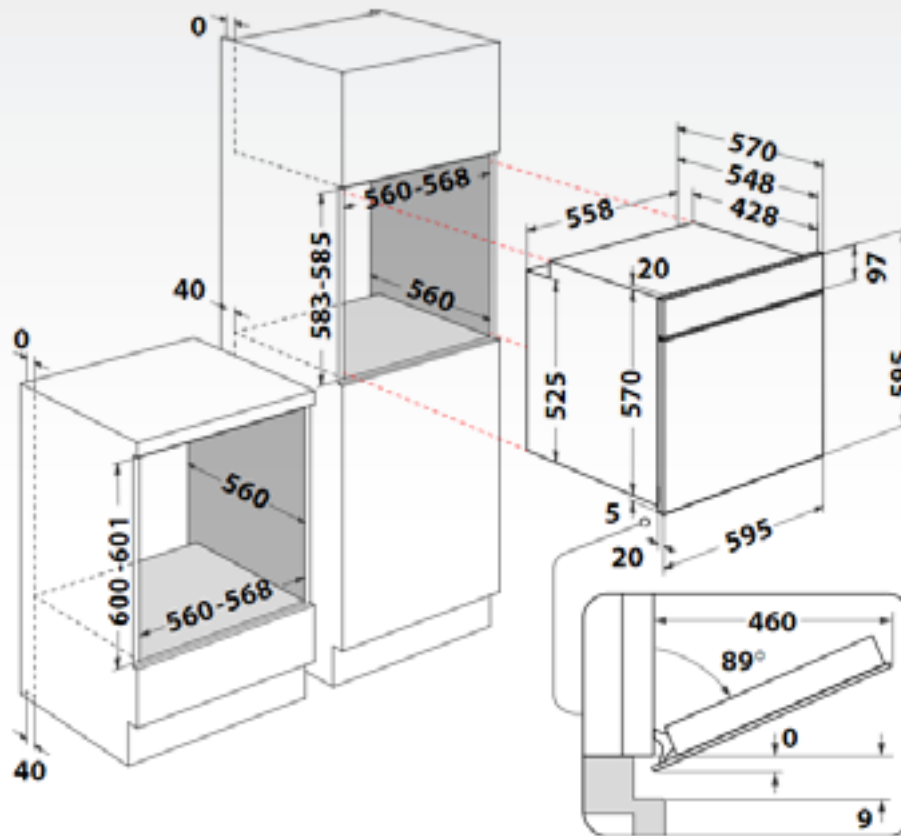

CONTROL PANEL

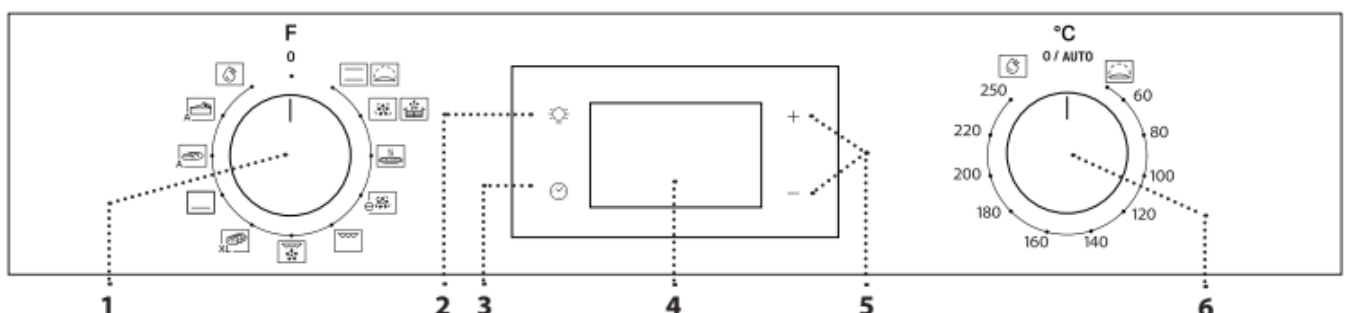 

1. SELECTION KNOB

For switching the oven on by selecting a function. Turn to the 0 position to switch the oven off.

2. LIGHT

With the oven switched on, press to turn the oven compartment lamp on or off.

3. SETTING THE TIME

For accessing the cooking time settings, delayed start and timer. For displaying the time when the oven is off.

4. DISPLAY

5. ADJUSTMENT BUTTONS

For changing the cooking time settings.

6. THERMOSTAT KNOB

Turn to select the temperature you require when activating manual functions.

Please note: Type of knobs may vary from model type. If the knobs are push-activated, push down on the center of the knob to release it from seating.